



Wireless Broadband Router

+

Access Point / Bridge

User's Manual

Model # AWR-1054GR

FCC Warning

This device is intended only form OEM integrators under the following conditions:

- 1) The antenna must be installed such that 20cm is maintained between the antenna and users, and
- 2) The transmitter module may not be co-located with any other transmitter or antenna.

IMPORTANT NOTE: In the event that these conditions can not be met (for example certain laptop configurations or co-location with another transmitter), then the FCC authorization is no longer considered valid and the FCC ID can not be used on the final product. In these circumstances, the OEM integrator will be responsible for re-evaluating the end product (including the transmitter) and obtaining a separate FCC authorization.

This transmitter module is authorized only for use in devices where the antenna may be installed such that 20 cm may be maintained between the antenna and users (for example access points, routers, wireless ADSL modems, and similar equipment). The final end product must be labeled in visible area with the following:

“Contains TX FCC ID: RXZ-WR514R”

IMPORTANT NOTE: To comply with FCC RF exposure compliance requirements, the antenna used for this transmitter must be installed to provide a separation distance of at least 20cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.”

Notice

Changes or modifications to the equipment, which are not approved by the party responsible for compliance could affect the user's authority to operate the equipment. Company has an on-going policy of upgrading its products and it may be possible that information in this document is not up-to-date. Please check with your local distributors for the latest information.

CE Mark Warning

This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

Copyright

1999 All Rights Reserved.

No part of this document can be copied or reproduced in any form without written consent from the company.

Trademarks:

All trade names and trademarks are the properties of their respective companies.

Table of Contents

1.	Introduction	5
1.1	Features	6
1.2	Package Contents	7
1.3	LEDs Indication & Connectors of Wireless Router	8
1.4	System Requirements.....	9
1.5	Installation Instruction.....	9
2	PC Configuration	11
2.1	TCP/IP Networking Setup.....	11
2.2	Setting up Internet Access.....	19
2.3	Configure Wireless Station	20
3.	Setup Wireless Router Configurations via Web Browser....	21
3.1	Start your Web Browser	21
3.2	Setup Wizard.....	22
3.2.1	Gateway.....	23
3.2.2	Bridge.....	26
3.2.3	Wireless ISP	29
3.3	Operation Mode	34
3.4	Wireless	35
3.4.1	Basic Settings	35
3.4.2	Advanced Settings	36
3.4.3	Security	37
3.4.4	Access Control	38
3.4.5	WDS Settings	39
3.4.6	Site Survey	40
3.4.7	Easy Config.....	41

3.5	TCP/IP Settings.....	48
3.5.1	LAN Interface	48
3.5.2	WAN Interface	49
3.6	Firewall	50
3.6.1	Port Filtering	50
3.6.2	IP Filtering	50
3.6.3	MAC Filtering	51
3.6.4	Port Forwarding	52
3.6.5	URL Filtering	52
3.6.6	DMZ.....	53
3.7	Route Setup	54
3.8	Management	55
3.8.1	Status	55
3.8.2	Statistics.....	56
3.8.3	DDNS	56
3.8.4	Time Zone Setting.....	57
3.8.5	Log.....	57
3.8.6	Upgrade Firmware	58
3.8.7	Save/Reload Setting	58
3.8.8	Password.....	59
3.9	Logout	59
4	Troubleshooting.....	61

1. Introduction

Thank you for purchasing the Wireless 11g Access Point (AP) Router. This Wireless AP Router, IEEE802.11g standard compliant, is a high quality and reliable Internet routing and security device, enables multiple users to share the Broadband Internet connection with or without wires through a Cable or DSL modem. Simply install the router, connect to Cable/DSL modem, and surf Internet without extra efforts. Acting as a 10/100Mbps 4-port Ethernet switch as well, the router, with all ports supporting MDI/MDIX, allows you to use CAT5 cable to uplink to other routers/switches.

The Wireless 11g AP Router is featured with advanced security technology, supporting WEP, WPA-PSK, WPA (Wi-Fi Protected Access) TKIP/AES, WPA2 and RADIUS. With the router, your network is armed with the highest levels of protection. The Router provides a total solution for the Small and Medium-sized Business (SMB) and the Small Office/Home Office (SOHO) markets, giving you an instant network today, and the flexibility to handle tomorrow's expansion and speed.



1.1 Features

Internet Access Features

- Shared Internet Access: All users on the LAN or WLAN can access the Internet through the Wireless Router, using only a single external IP address. The local (invalid) IP addresses are hidden from external sources. This process is called NAT (Network Address Translation).
- DSL and cable modem Support: The Wireless Router has a 10/100BaseT Ethernet WAN port for connecting a DSL or cable modem. All popular DSL and cable modems are supported.
- PPPoE and PPTP Support: The Internet (WAN port) connection supports PPPoE (PPP over Ethernet) and PPTP (Point-to-Point Tunneling Protocol), as well as "Direct Connection" type services.
- Fixed or Dynamic IP Address: On the Internet (WAN port) connection, the Wireless Router supports both Dynamic IP address (IP address is allocated on connection) and Fixed IP address.
- Non-Detachable Antenna

Advanced Internet Functions

- Conferencing & Telephony Applications: Internet Telephony and Conferencing applications are supported.
- DMZ: One PC on your local LAN can be configured to allow unrestricted 2-way communication with Servers or individual users on the Internet.
- URL Filter: Use the URL Filter to block access to undesirable Web sites by LAN users, or Wireless LAN users.
- Internet Access Log: This feature is used to verify which Internet connections have been made.

Wireless Features

- Compliant with IEEE 802.11g standard.
- Up to 54Mbps data transfer rates (wireless)
- Backward compatible with IEEE802.11b (at 11Mbps)
- WEP Support: Support 64/128 bit WEP (Wired Equivalent Privacy) encryption.
- WPA Support: Support WPA-PSK Pass Phrase, and WPA TKIP/AES Data Encryption.
- WPA2 Support: Support WPA2 TKIP/AES.
- Access Control: This feature ensures that only access Wireless Stations that can access your LAN.
- Simple Configuration: All default settings can be changed easily.
- Supports Wireless Distribution System (WDS)

LAN Features

- 4-Port Ethernet switch : The Wireless Router provides 4 10/100BaseT switching ports
- DHCP Server Support: This feature provides a dynamic IP address to PCs and other devices upon request. The Wireless Router can act as a DHCP Server for devices on your local LAN and WLAN.
- Multi Segment LAN Support: This feature is enabled through Wireless Router's RIP (Routing Information Protocol) and build-in static routing table.

Configuration and Management

- Easy Setup: Users allow to configure Wireless Router from anywhere on the LAN or WLAN via WEB browser.
- Remote Management: The Wireless Router can be managed from any PC on the LAN.
- UPnP Support: Universal Plug and Play feature. UPnP is supported by Windows ME or later.

Security Features


- Password Protected Configuration: Optional password protection is provided to prevent unauthorized users from modifying the configuration data and settings.
- Wireless LAN Security: Supports 64/128 bit WEP Encryption, WPA-PSK, WPA TKIP/AES, WPA2 TKIP/AES, and RADIUS Server.
- NAT Protection: This feature allows all LAN users to share a single IP address and all users' IPs are hidden. From the external viewpoint, there is no network only Wireless Router exists.
- Firewall: All incoming data packets are monitored and all incoming server requests are filtered.

1.2 Package Contents

- One Wireless 11g AP Router
- One 9V AC Power Adapter
- One CD including user's manual
- One RJ-45 Ethernet Cable


1.3 LEDs Indication & Connectors of Wireless Router

Front Panel LEDs Indication

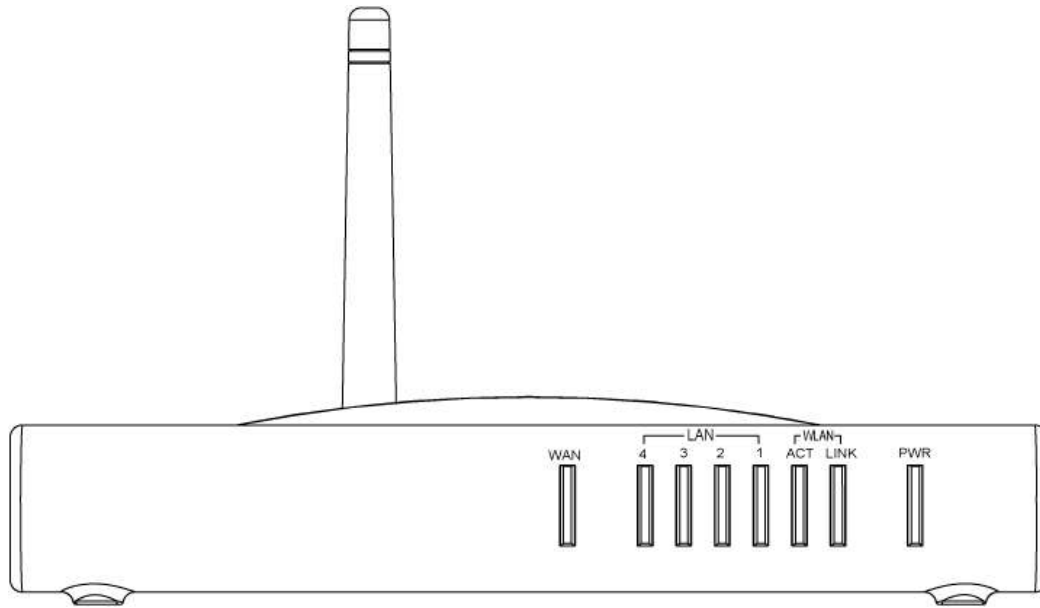

LED	Light Status	Description
PWR	On	Wireless Router is powered on.
	Off	No power.
LAN (1, 2, 3, 4)	On	LAN port is successfully connected.
	Flashing	Data is being sent or received.
WAN	On	WAN port is successfully connected
	Flashing	Data is being sent or received.
ACT (WLAN)	Flashing	Data is being sent or received.
LINK (WLAN)	On	Wireless connection is ready.

Back Panel Connectors

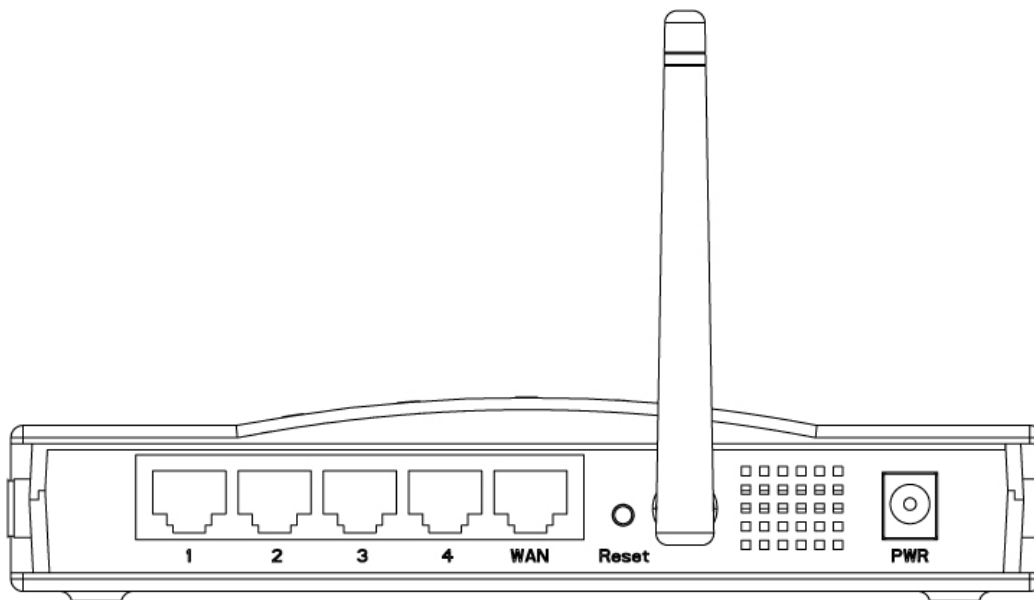

Button/port	Description
Reset	Reset configurations to default. Press the button and hold for 10 seconds.
LAN (1x, 2x, 3x, 4x)	Connect LAN systems with RJ-45 cable.
WAN	Connect DSL or Cable modem.
AC IN	Connect with AC Power Adapter.

1.4 System Requirements

- One or more PCs (desktop or notebook) with Ethernet interface.
- TCP/IP protocol must be installed on all PCs.
- Have valid Internet Access account and a DSL or cable modem.
- 10/100BaseT network cables with RJ-45 connectors.
- In case to use Wireless Access Point, all Wireless devices must be compliant with IEEE 802.11b/g.
- System with MS Internet Explorer ver. 5.0 or later, or Netscape Navigator ver. 4.7 or later.

1.5 Installation Instruction

- 1) Power off Wireless Router and DSL/cable modem.
- 2) Connect systems to the LAN ports on the Wireless Router with straight LAN cables.
- 3) Connect the DSL or cable modem to the WAN port on the Wireless Router.

- 4) Power on DSL or cable modem first, then connect power adapter to the power jack on the Wireless Router and plug the power cable into an outlet.
- 5) Check LEDs.
 - a) Once power on Wireless Router, Power LED should be on.
 - b) LAN LED should be on for each active LAN connection.
 - c) The WAN LED should be on when the DSL or cable modem is connected.

Warning: Only use the power adapter is provided from this package, use other power adapter may cause hardware damage

2 PC Configuration


User needs to configure TCP/IP network settings, Internet access configuration and Wireless configuration for each system within Wireless Router's LAN network.

By default, Wireless Router acts as a DHCP server for server version of Windows, it automatically assigns IP address to each system when systems boot up. For all non-server versions of Windows, the default TCP/IP setting acts as a DHCP client. If user chooses fixed IP addresses for client systems, the **Gateway** of the client system must be set to the IP address of the Wireless Router and **DNS** of the client system should be set to the address provided by your ISP.


2.1 TCP/IP Networking Setup

Checking TCP/IP Settings for Windows 9x/Me


- a) Select "**Start → Control Panel → Network**", the window below will appear:

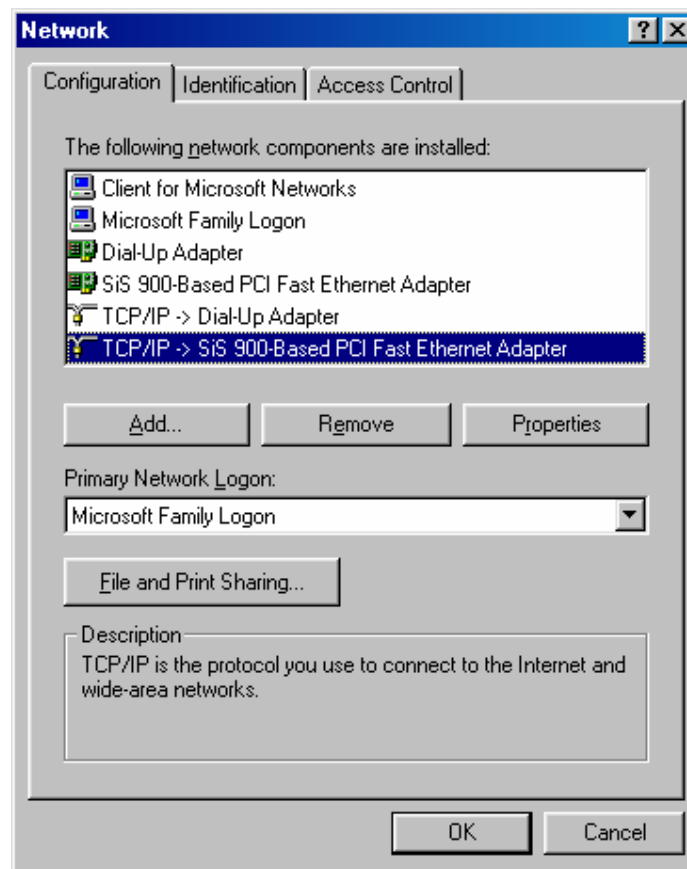


- b) Click **“Properties”**, the window below will appear:

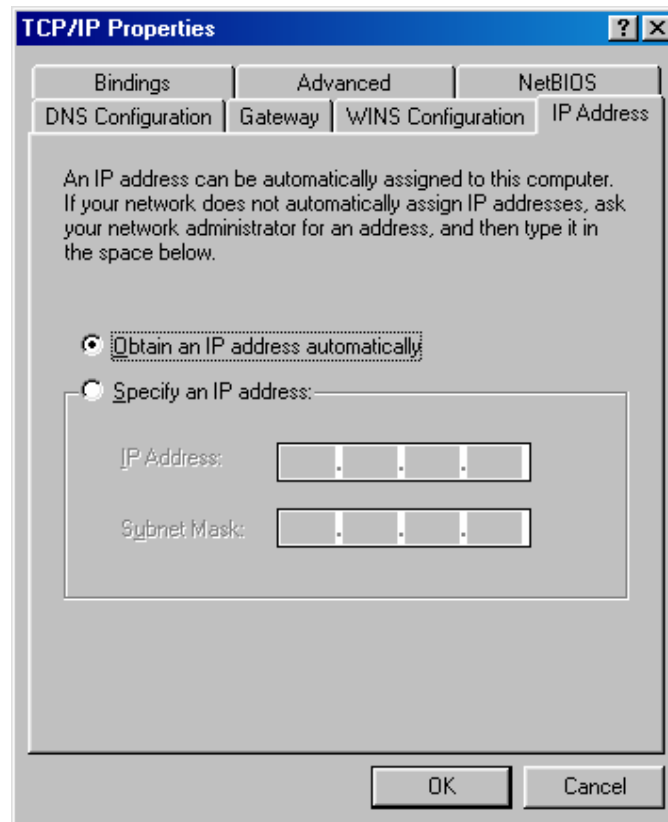

- If you decide to use DHCP, select **“Obtain an IP address automatically”**, then click **“OK”** to confirm your settings. Once you restart your system, Wireless Router will obtain an IP address for this system.
 - If you decide to use fixed IP address for your system, select **“Specify an IP address”**, and make sure that **IP Address** and **Subnet Mask** are correct.
- c) Select **“Gateway”** tab and enter correct gateway address in **“New gateway”** field, then click **“Add”**:

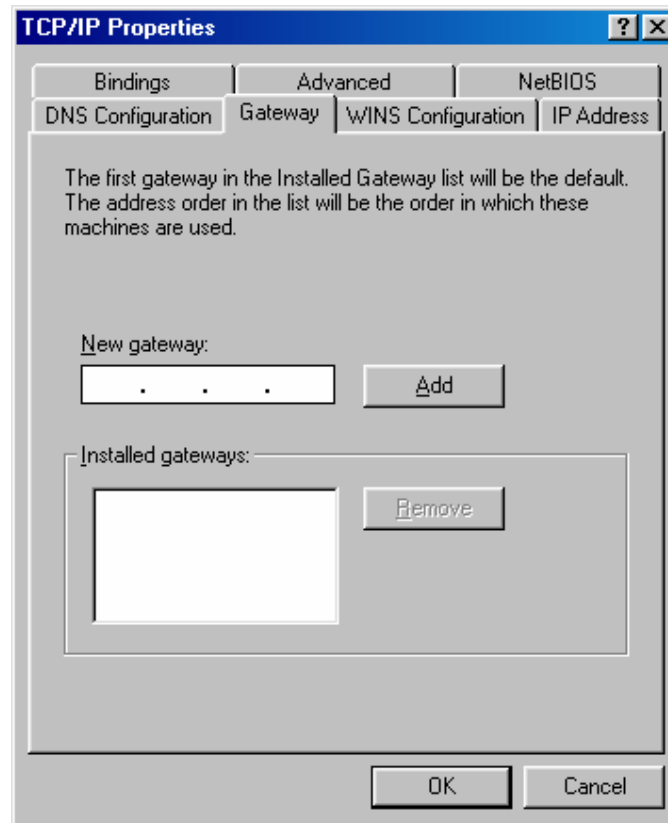


- d) Select **"DNS Configuration"** tab and make sure select **"Enable DNS"**, enter the DNS address provides from your ISP in the **"DNS Server Search Order"** field, then click **"Add"**:

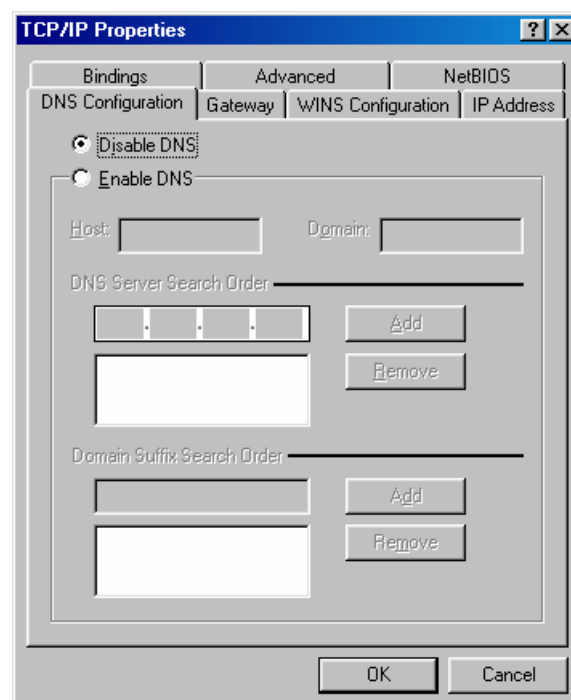


Checking TCI/IP Setting for Windows NT4.0


- a) Select “**Control Panel → Network**”, click “**Protocols**” tab then select “**TCP/IP protocol**”, window shown as below will appear:

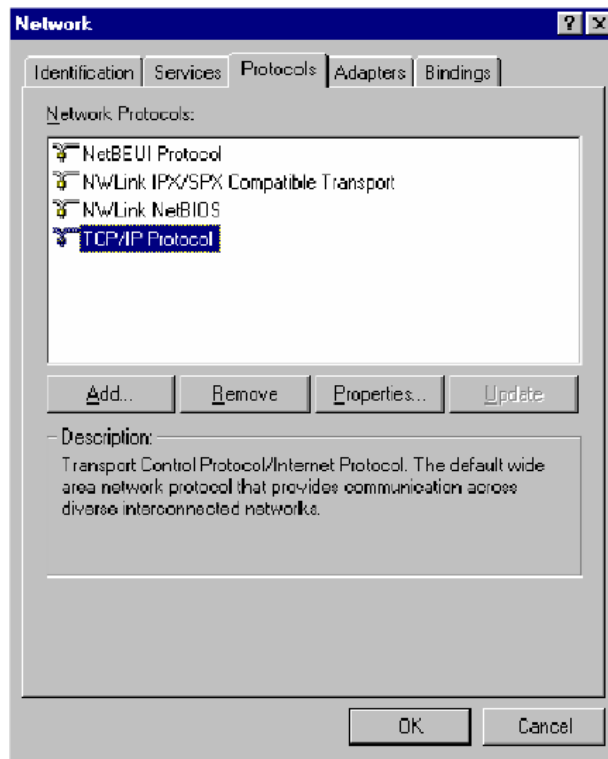

- b) Click “**Properties**”, window shown as below will appear.

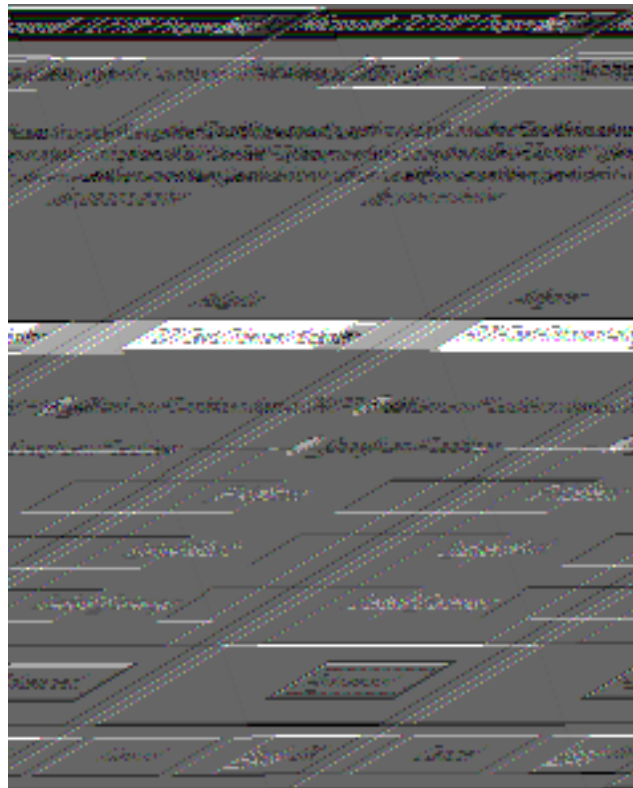


- Select the network card on your system from “**Adapter**” field.
 - If you decide to use IP address from Wireless Router, select “**Obtain an IP address from a DHCP server**”.
 - If you decide to use the IP address you are desired, select “**Specify an IP address**”. Make sure enter correct addresses in “**IP Address**” and “**Subnet Mask**” fields.
 - You must set Wireless Router’s IP address as “**Default Gateway**”.
- c) To enter DNS address is provided from your ISP. Select “**DNS**” tab, click “**Add**” under “**DNS Service Search Order**” list, then enter DNS Server IP address in “**TCP/IP DNS Server**” window and click “**Add**”.

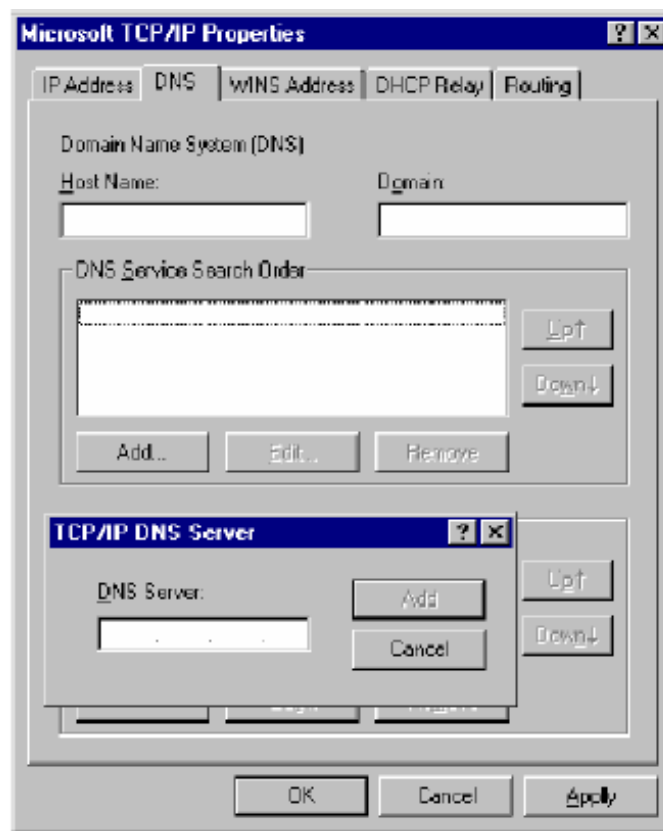


Checking TCP/IP Settings for Windows 2000

- a) Select “**Start → Control Panel → Network and Dial-up Connection**” and right click “**Local Area Connection**” then click “**Properties**”:

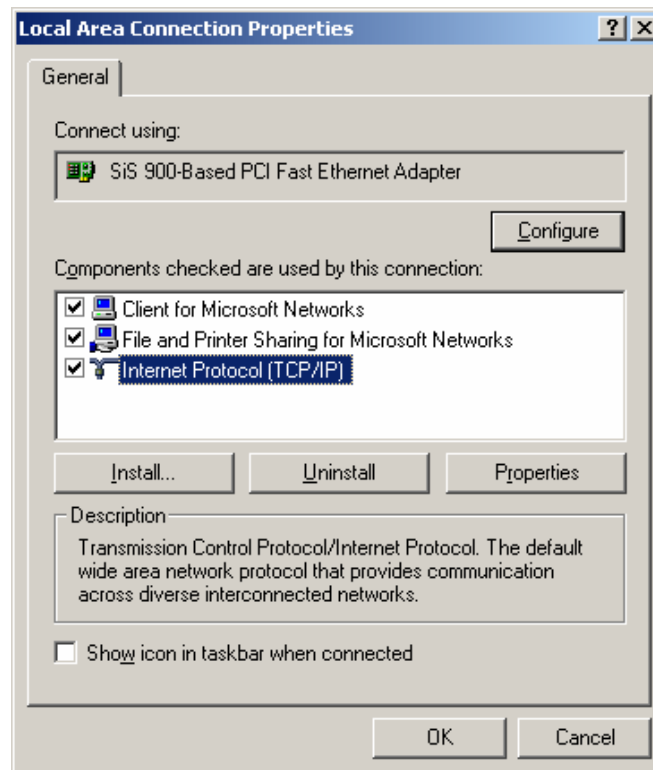


- b) Select the “**Internet Protocol (TCP/IP)**” for the network card on your system, then click “**Properties**”, window shown as below will appear.

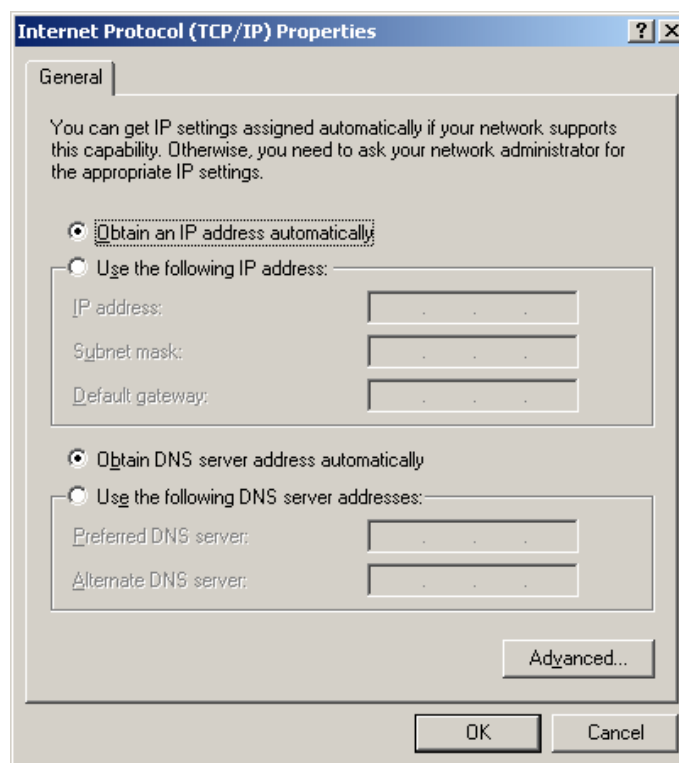


- If you decide to use IP address from Wireless Router, select **“Obtain an IP address automatically”**.
- If you decide to use the IP address you are desired, select **“Use the following IP address”**. Make sure enter correct addresses in **“IP Address”** and **“Subnet Mask”** fields.
- You must set Wireless Router’s IP address as **“Default Gateway”**.
- If the DNS Server fields are empty, select **“Use the following DNS server addresses”** and enter the DNS address is provided by your ISP, then click **“OK”**.

Checking TCP/IP Settings for Windows XP

- a) Click **“Start”**, select **“Control Panel → Network Connection”** and right click **“Local Area Connection”** then select **“Properties”**. The window shown as below will appear.

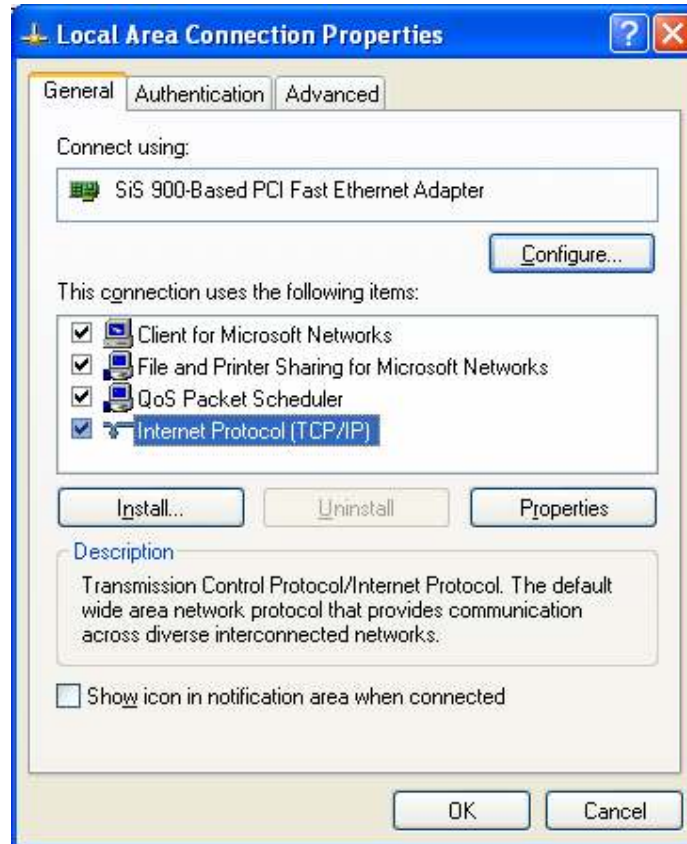

- b) Select **“Internet Protocol (TCP/IP)”** then click **“Properties”**, window shown as below will appear.

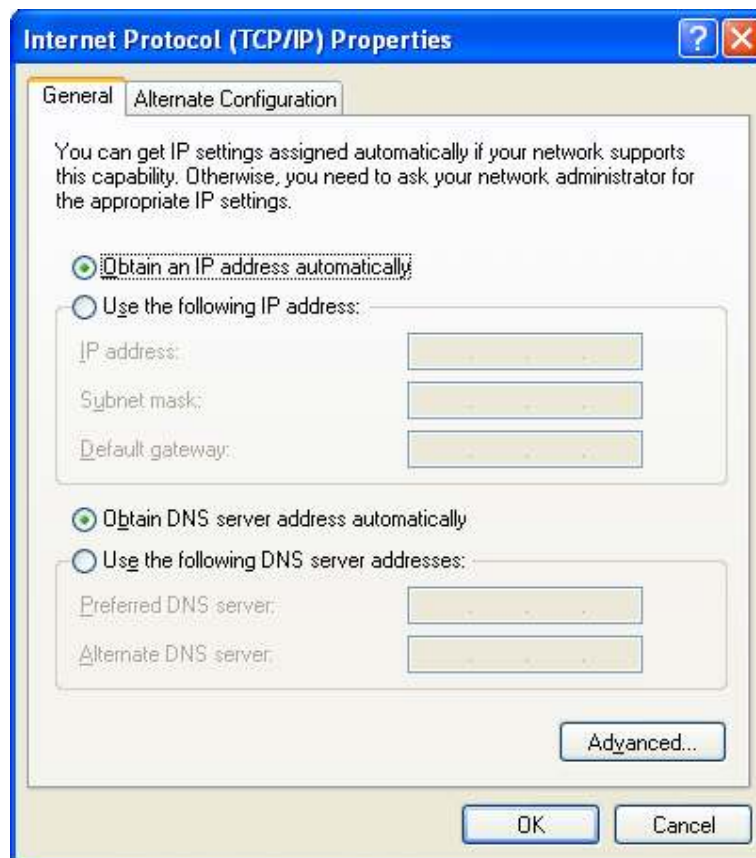

- If you decide to use IP address from Wireless Router, select “**Obtain an IP address automatically**”.
- If you decide to use the IP address you are desired, select “**Use the following IP address**”. Make sure enter correct addresses in “**IP Address**” and “**Subnet Mask**” fields.
- You must set Wireless Router’s IP address as “**Default Gateway**”.
- If the DNS Server fields are empty, select “**Use the following DNS server addresses**” and enter the DNS address is provided by your ISP, then click “**OK**”.

2.2 Setting up Internet Access

This section describes how to setup Wireless Router Internet access through DSL or cable modem.

For Windows 9x/2000

- a) Click **"Start"** and select **"Settings → Control Panel → Internet Options"**.
- b) Select **"Connection"** tab then click **"Setup"** button.
- c) Select **"I want to set up my Internet connection manually, or I want to connect through a local area network (LAN)"** then click **"Next"**.
- d) Select **"I connect through a local area network (LAN)"** then click **"Next"**. Make sure all the boxes on the following LAN Internet Configuration screen are unchecked.
- e) Select **"No"** when **"Do you want to set up an Internet mail account now?"** prompts out.
- f) Click **"Finish"** to end setup process.

For Windows XP

- a) Click **"Start"** and select **"Control Panel → Network and Internet Connections."**
- b) Select **"Set up or Change your Internet Connection."**
- c) Click **"Connection"** tab, then click the **"Setup"** button. Click **"Cancel"** in the pop-up **"Location Information"** window.
- d) Click **"Next"** in the **"New Connection Wizard"** window.
- e) Select **"Connect to the Internet"** then click **"Next"**.
- f) Select **"Set up my connection manually"** then click **"Next"**.
- g) Select **"Connect using a broadband connection that is always on"** then click **"Next"**.
- h) Click **"Finish"** to complete the setup process.

For Macintosh Clients

To access Internet via wireless router on Macintosh system, the set up procedures are showing below:

- a) Open the TCP/IP Control Panel.
- b) Select **Ethernet** from the Connect via pop-up menu.
- c) Select **Using DHCP Server** from the Configure pop-up menu. The **DHCP Client ID** field can be left blank.
- d) Close the TCP/IP panel and save your new settings.

If you decide to assign IP addresses manually instead of DHCP, set the **Router Address** field with wireless router's IP address and make sure DNS settings are correct.

For Linux Clients

To access Internet via the wireless router, you need to set the wireless router as the **"Gateway"**. Make sure login as **"root"** before attempting any changes.

Fixed IP Address

Most Linux installations use fixed IP address, if you wish to use a fixed IP address, make sure make the following changes.

- a) Set **"Default Gateway"** with the IP address of the wireless router.
- b) Make sure DNS settings are correct.

To act as a DHCP Client (recommended)

The procedures below may vary depending on version of Linux and X-windows shell.

- a) Start X-Windows.
- b) Select **Control Panel → Network**.
- c) Select the **"Interface"** entry for your Network card. Normally, this is called **"eth0"**.
- d) Click **"Edit"** button, set the **"protocol"** to **"DHCP"** and save.
- e) To apply all changes, use **Deactivate** and **Activate** buttons, if it is possible, restart your system.

2.3 Configure Wireless Station

This section describes how to configure all the wireless stations use Wireless Router as an Access Point. Each wireless station must have compatible settings as below.

Mode	All wireless stations must be set to "Infrastructure" mode.
SSID (ESSID)	This code must match the value uses for the Wireless Router. (Note: SSID code is case sensitive.)
WEP	By default, WEP encryption is set to 64-bits 10 hex digit.
WPA	By default, WPA-PSK Pass Phrase is set at PassPhrase, WPA G-Rekey Interval is set at 0 and WPA Data Encryption is at TKIP.

3. Setup Wireless Router Configurations via Web Browser

The Wireless Router comes with a web-based configuration utility. Users can access this configuration utility from any of client system within Wireless Router's LAN. For best results, either use Microsoft Internet Explorer 5.0 or later, or Netscape Navigator 4.7 or later.

Before you start configuring your Wireless Router, you have to get following information from your ISP:


- a) Has your ISP assigned you a static IP address, or they will assign one to you dynamically? If you have received a static IP address, what is it?
- b) Does your ISP use PPPoE? If so, what is your PPPoE username and password?

If you are not sure of above questions, please contact your ISP.

3.1 Start your Web Browser

To use the Web-Based Utility, you have to launch your Internet Browser (MS IE 5.0 or later, Netscape Navigator 4.7 or later).

Step1: Enter Wireless Router default IP address <http://192.168.1.1> in the Address field then hit Enter key:

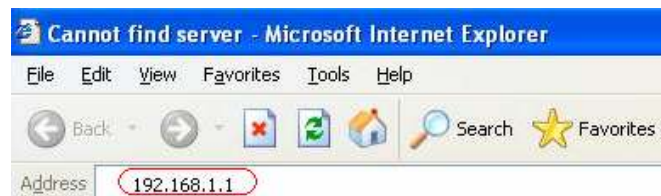

Step2: Login dialog box will appear, enter **admin** as User Name and default password is **1234**, then click "OK" to login web-based utility.



3.2 Setup Wizard


This Setup Wizard will guide you to configure access for the first time. Please follow the setup wizard step by step.



Depend on different modes, the setup wizard will be different. Please follow the below brief descriptions:


3.2.1 Gateway

(1) Setup Operation Mode – Gateway: In this mode, the device is supposed to connect to internet via ADSL/Cable Modem. The NAT is enabled and PCs in four LAN ports share the same IP to ISP through WAN port. The connection type can be setup in WAN port. The connection type can be setup in WAN page by using PPPoE, DHCP client, PPTP client, L2TP client or static IP.

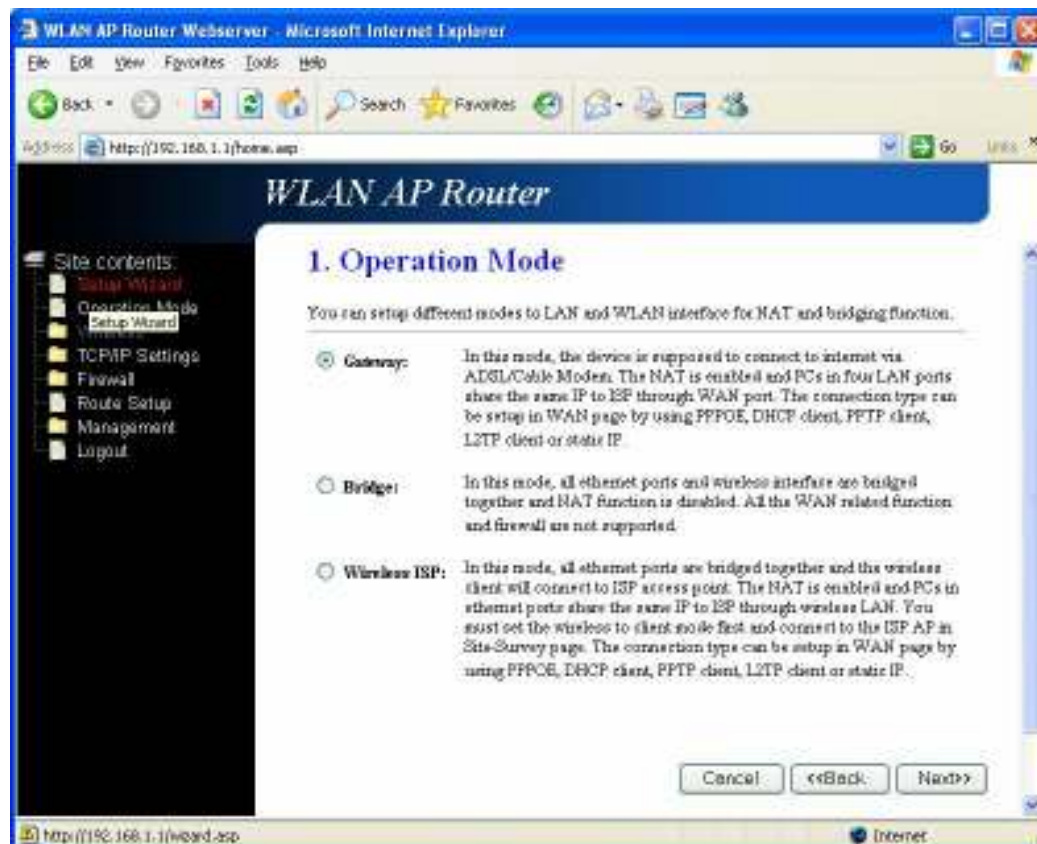


(2) Choose your Time Zone: You can maintain the system time by synchronizing with a public

server over the Internet.

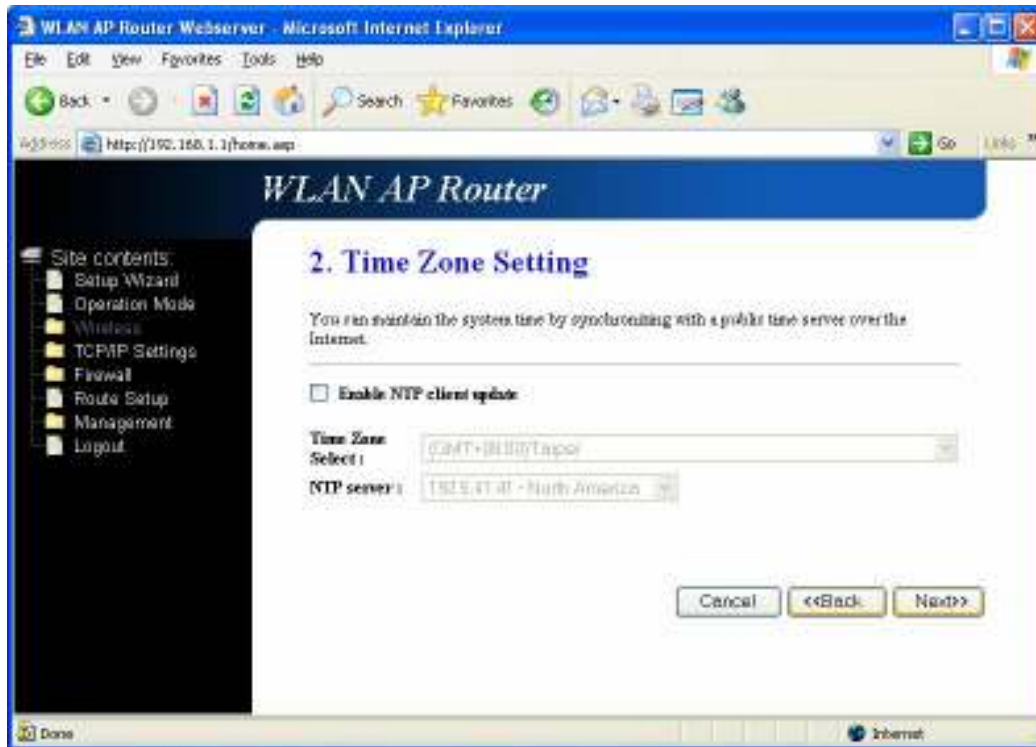

(3) Setup LAN Interface: This page is used to configure the parameters for local area network which connects to the LAN port of your AP Router. Here you may change the setting for IP address, subnet mask, DHCP, etc.

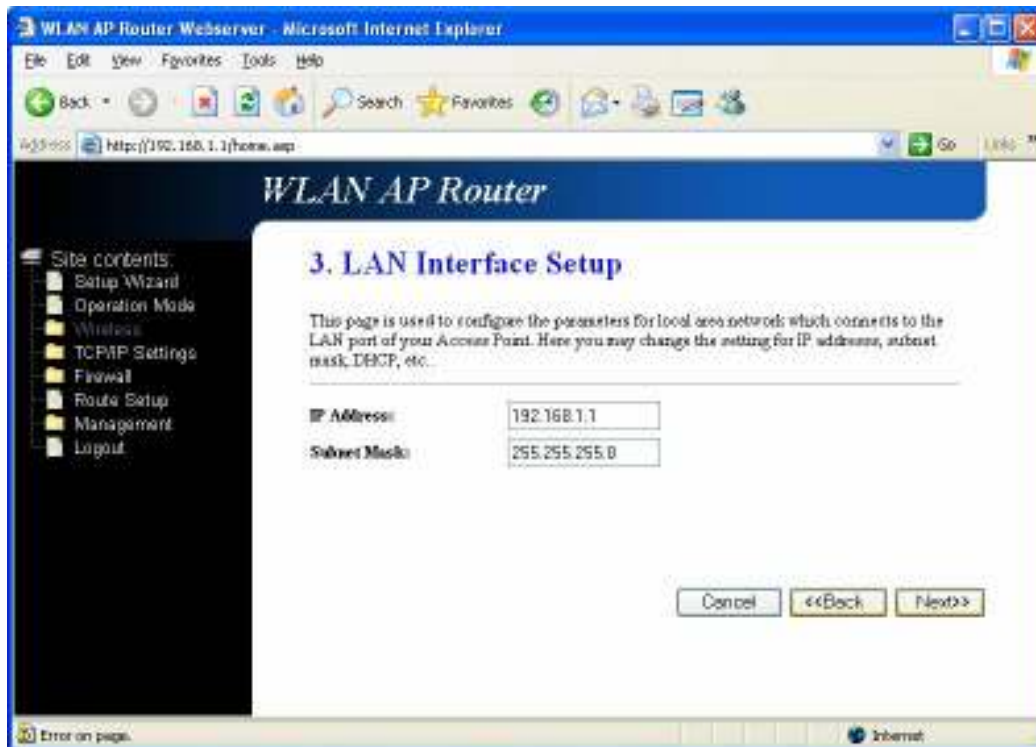

(4) Setup WAN Interface: This page is used to configure the parameters for Internet network which connects to the WAN port of your AP Router. Here you may change the access method to static IP, DHCP, PPPoE, PPTP, or L2TP by click the item value of WAN Access type.

The screenshot shows the 'WLAN AP Router' web interface in Microsoft Internet Explorer. The address bar shows 'http://192.168.1.1/home.asp'. The left sidebar contains a 'Site contents' menu with options: Setup Wizard, Operation Mode, Wireless, TCP/IP Settings, Firewall, Route Setup, Management, and Logout. The main content area is titled '4. WAN Interface Setup'. It includes a description: 'This page is used to configure the parameters for Internet network which connects to the WAN part of your Access Point. Here you may change the access method to static IP, DHCP, PPPoE, PPTP, or L2TP by click the item value of WAN Access type.' Below this, there are input fields for: WAN Access Type (set to L2TP), IP Address (61.1.1.2), Subnet Mask (255.255.255.0), Server IP Address (61.1.1.1), User Name (l2tp), and Password (masked with dots). At the bottom right are buttons for 'Cancel', '<<Back', and 'Next>>'. The status bar at the bottom shows 'Done' and 'Internet'.

(5) Wireless LAN Setting: This page is used to configure the parameters for wireless LAN clients who may connect to your AP Router.


The screenshot shows the 'WLAN AP Router' web interface in Microsoft Internet Explorer. The address bar shows 'http://192.168.1.1/home.asp'. The left sidebar contains a 'Site contents' menu with options: Setup Wizard, Operation Mode, Wireless, TCP/IP Settings, Firewall, Route Setup, Management, and Logout. The main content area is titled '5. Wireless Basic Settings'. It includes a description: 'This page is used to configure the parameters for wireless LAN clients which may connect to your Access Point.' Below this, there are input fields for: Band (2.4 GHz [B+G]), Mode (AP), Network Type (Infrastructure), SSID (Default_11G), and Channel Number (6). There is also an unchecked checkbox labeled 'Enable Mac Clone (Single Ethernet Client)'. At the bottom right are buttons for 'Cancel', '<<Back', and 'Next>>'. The status bar at the bottom shows 'Error on page.' and 'Internet'.

(6) Wireless Security: This page allows you setup the wireless security. Turn on WEP or WPA by using Encryption Keys could prevent any unauthorized access to your wireless network.




3.2.2 Bridge


(1) Setup Operation Mode – Bridge: In this mode, all Ethernet ports and wireless interface are bridged together and NAT function is disabled. All the WAN related function and firewall are not supported.

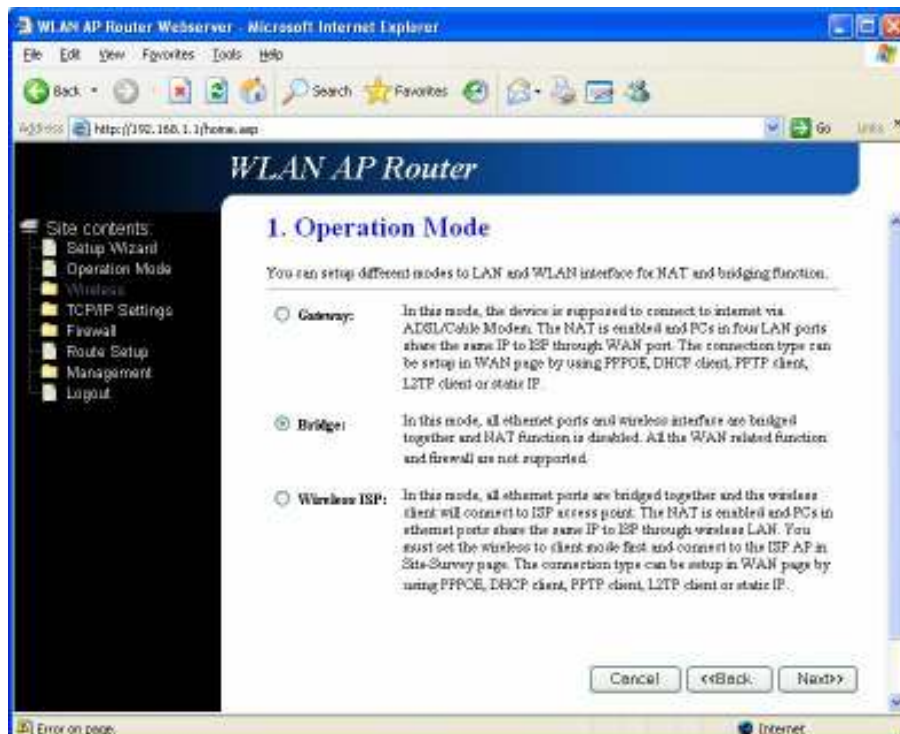

(2) **Choose your Time Zone:** You can maintain the system time by synchronizing with a public server over the Internet.

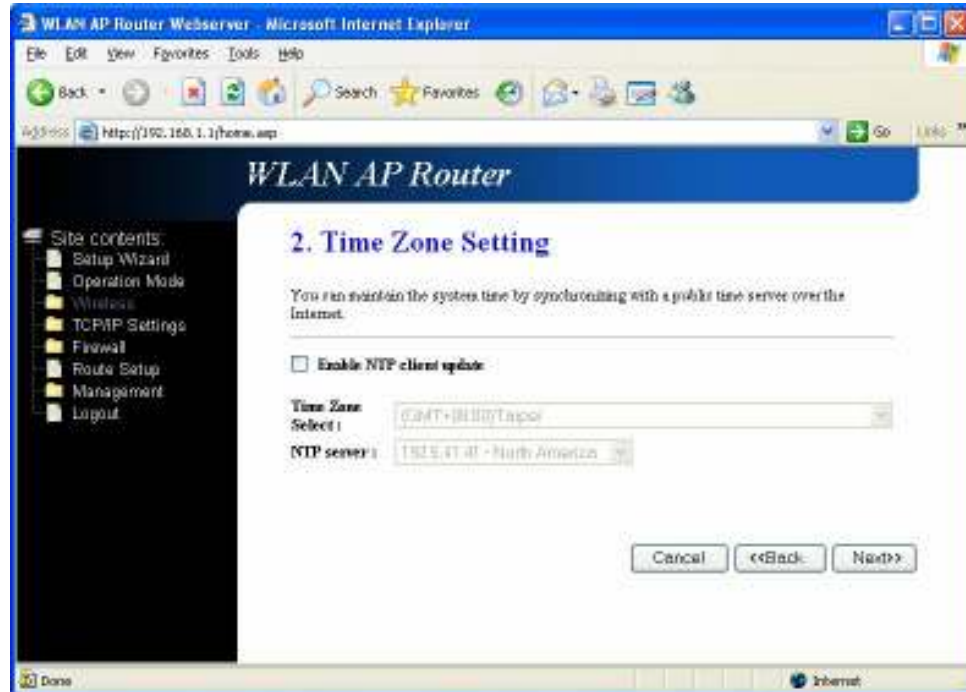

(3) **Setup LAN Interface:** This page is used to configure the parameters for local area network which connects to the LAN port of your AP Router. Here you may change the setting for IP address, subnet mask, DHCP, etc.

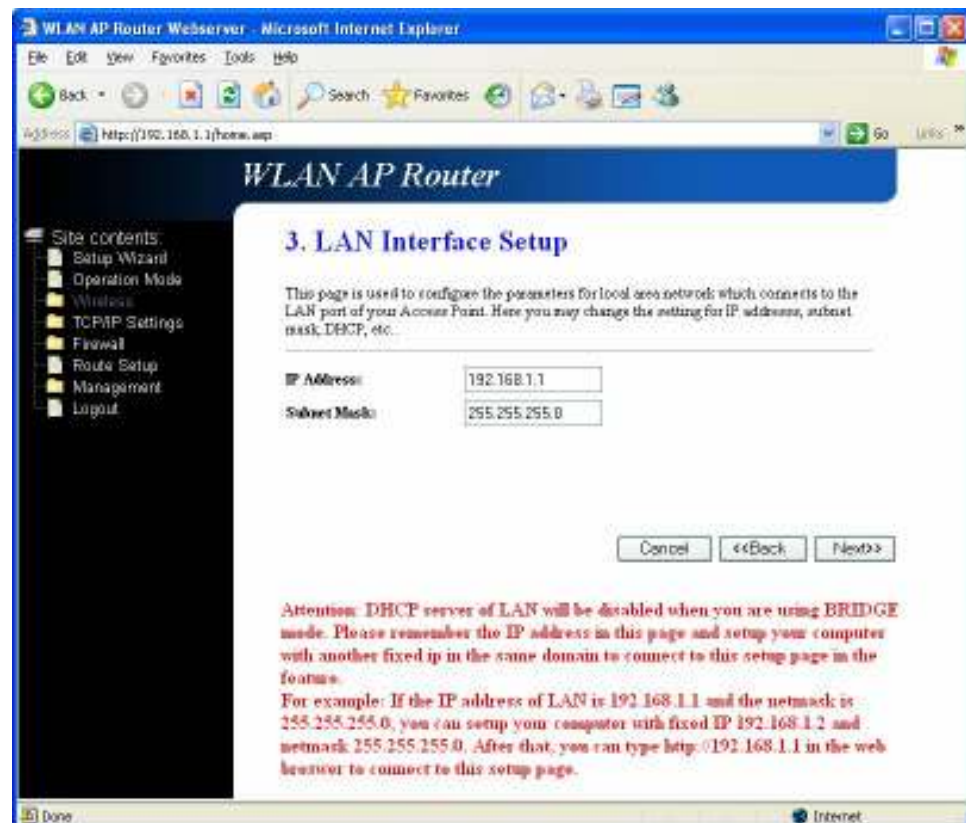

Attention: DHCP server of LAN will be disabled when you are using BRIDGE mode. Please remember the IP address in this page and set up your computer with another fix IP in the same domain to connect to this setup page in the future.

For Example: If the IP address of LAN is 192.168.1.1 and the Netmask is 255.255.255.0, you can setup your computer with fixed IP 192.168.1.2 and Netmask as 255.255.255.0. After that, you can type <http://192.168.1.1> in the web browser to connect this setup page.


(4) Wireless Basic Settings: This page is used to configure the parameters for wireless LAN clients who may connect to your AP Router.

The screenshot shows a web browser window titled "WLAN AP Router Webserver - Microsoft Internet Explorer". The address bar shows "http://192.168.1.1/home.asp". The page has a blue header with the text "WLAN AP Router". On the left, there is a "Site contents" menu with links to Setup Wizard, Operation Mode, Wireless, TCP/IP Settings, Firewall, Route Setup, Management, and Logout. The main content area is titled "5. Wireless Basic Settings" and contains the following fields and options:

- Band: 2.4 GHz (B+G)
- Mode: AP
- Network Type: Infrastructure
- SSID: Default_11G
- Channel Number: 6
- ☐ Enable Mac Clone (Single Ethernet Client)


At the bottom right of the form are three buttons: "Cancel", "<<Back", and "Next>>". The status bar at the bottom of the browser window shows "Error on page." and "Internet".

(5) **Wireless Security:** This page allows you setup the wireless security. Turn on WEP or WPA by using Encryption Keys could prevent any unauthorized access to your wireless network.

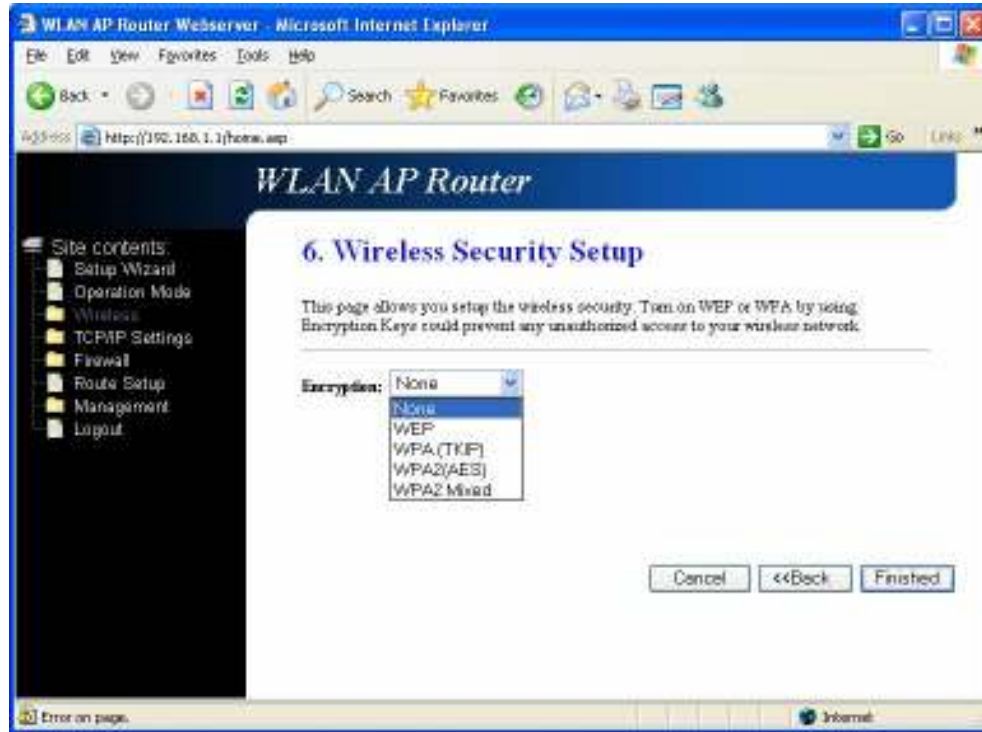


3.2.3 Wireless ISP


(1) **Setup Operation Mode – Wireless ISP:** In this mode, all Ethernet ports are bridged together and the wireless client will connect to ISP access point. The NAT is enabled and PCs in Ethernet ports share the same IP to ISP through wireless LAN. You must set the wireless to client mode first and connect to the ISP AP in Site-Survey page. The connection type can be setup in Wan page by using PPPoE, DHCP client, PPTP client, L2TP client or static IP.

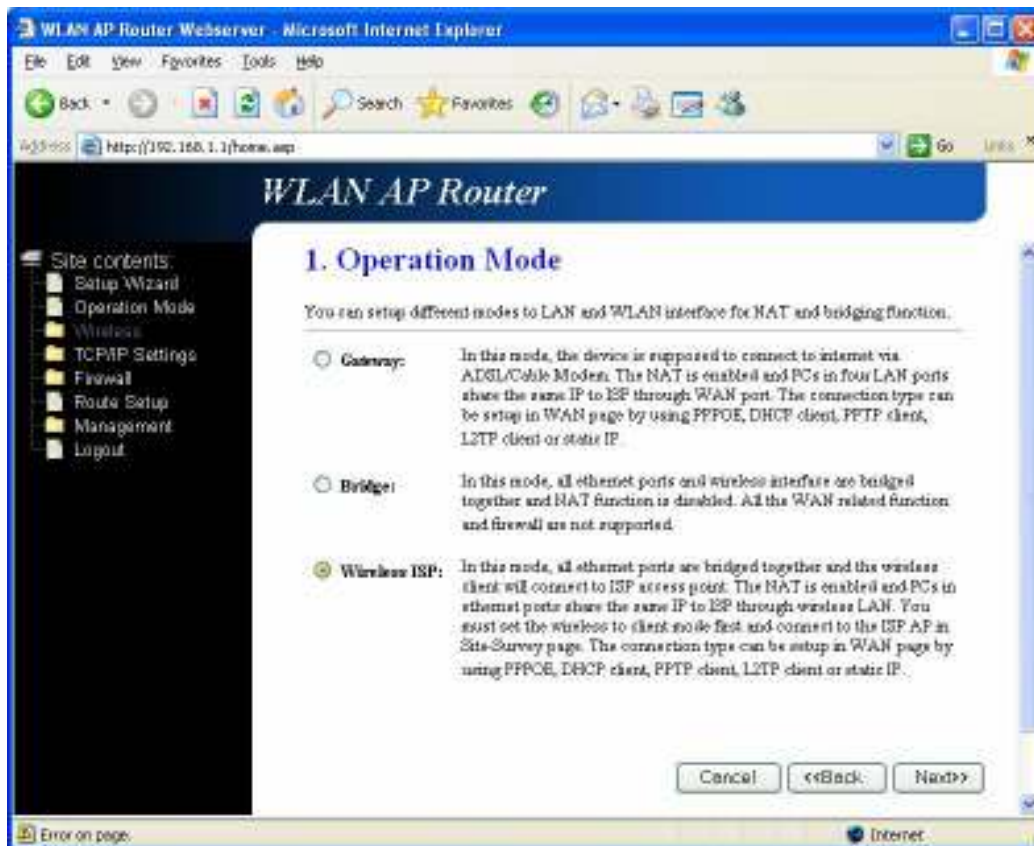


(2) **Choose your Time Zone:** You can maintain the system time by synchronizing with a public server over the Internet.

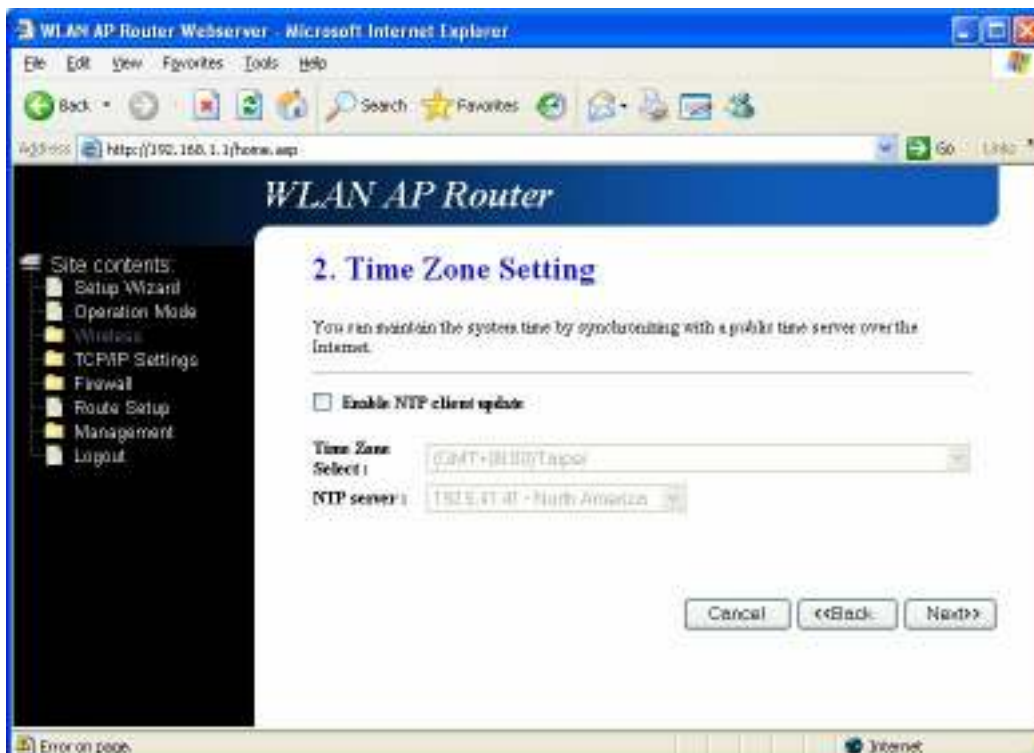


(3) Setup LAN Interface: This page is used to configure the parameters for local area network which connects to the LAN port of your AP Router. Here you may change the setting for IP address, subnet mask, DHCP, etc.

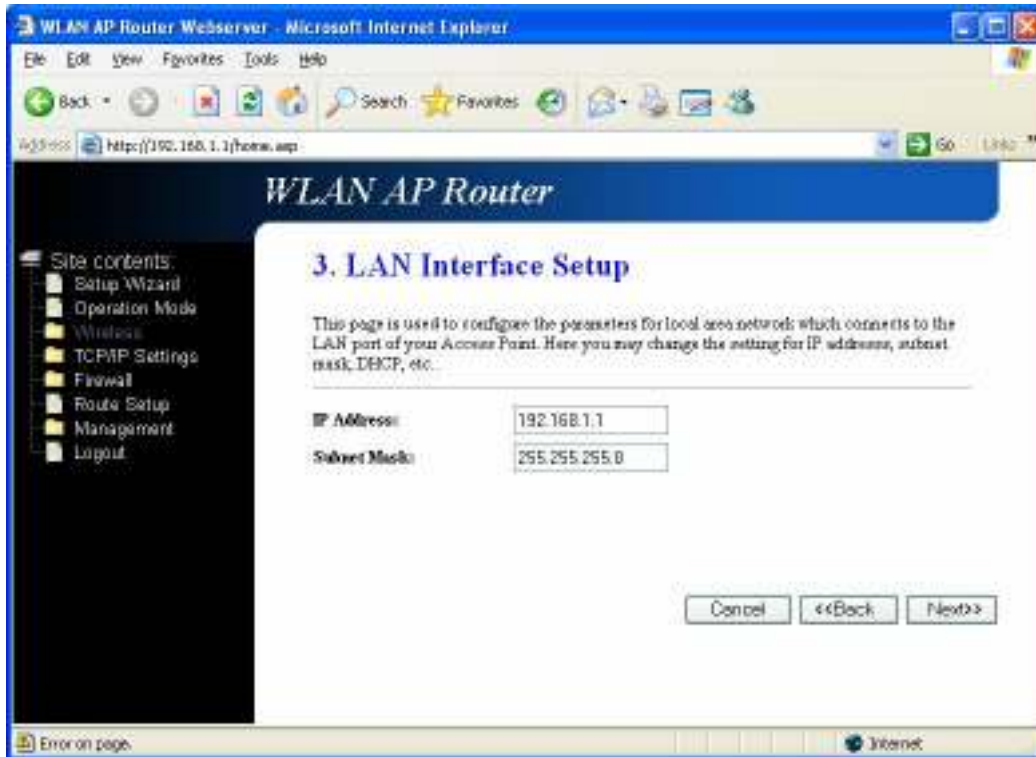


(4) Setup WAN Interface: This page is used to configure the parameters for Internet network which connects to the WAN port of your AP Router. Here you may change the access method to static IP, DHCP, PPPoE, PPTP, or L2TP by click the item value of WAN Access type.

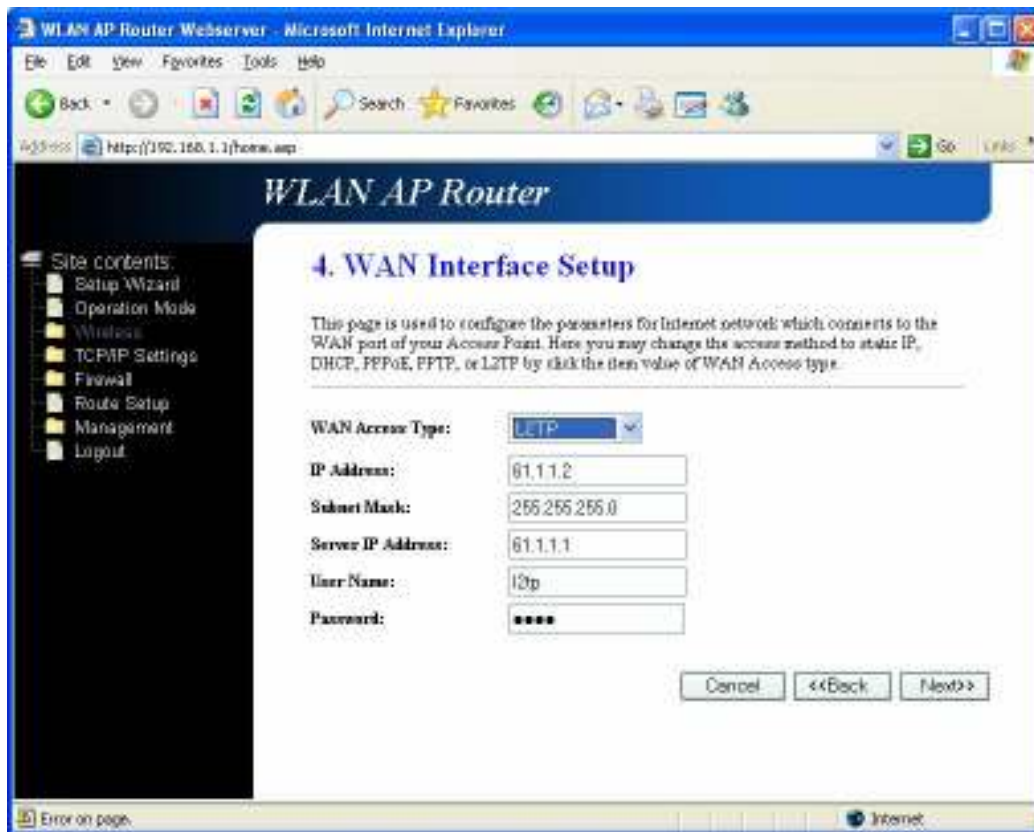

(5) **Wireless LAN Setting:** This page is used to configure the parameters for wireless LAN clients who may connect to your AP Router.

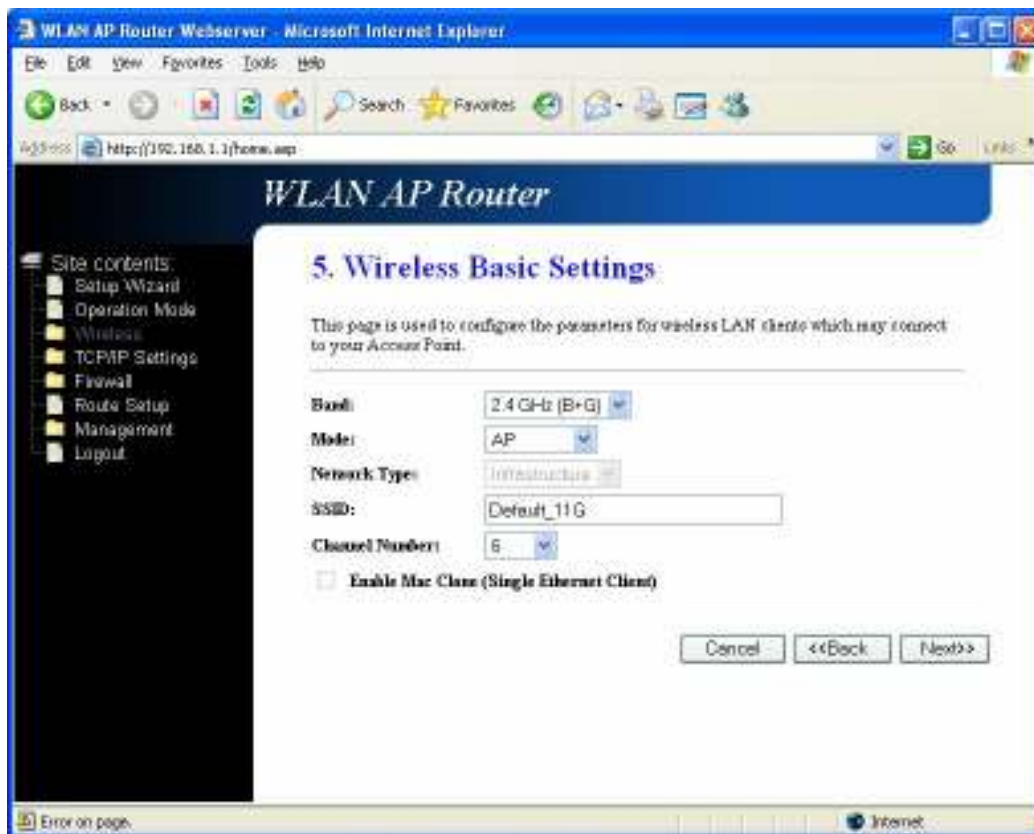


(6) **Wireless Security:** This page allows you setup the wireless security. Turn on WEP or WPA by using Encryption Keys could prevent any unauthorized access to your wireless network.

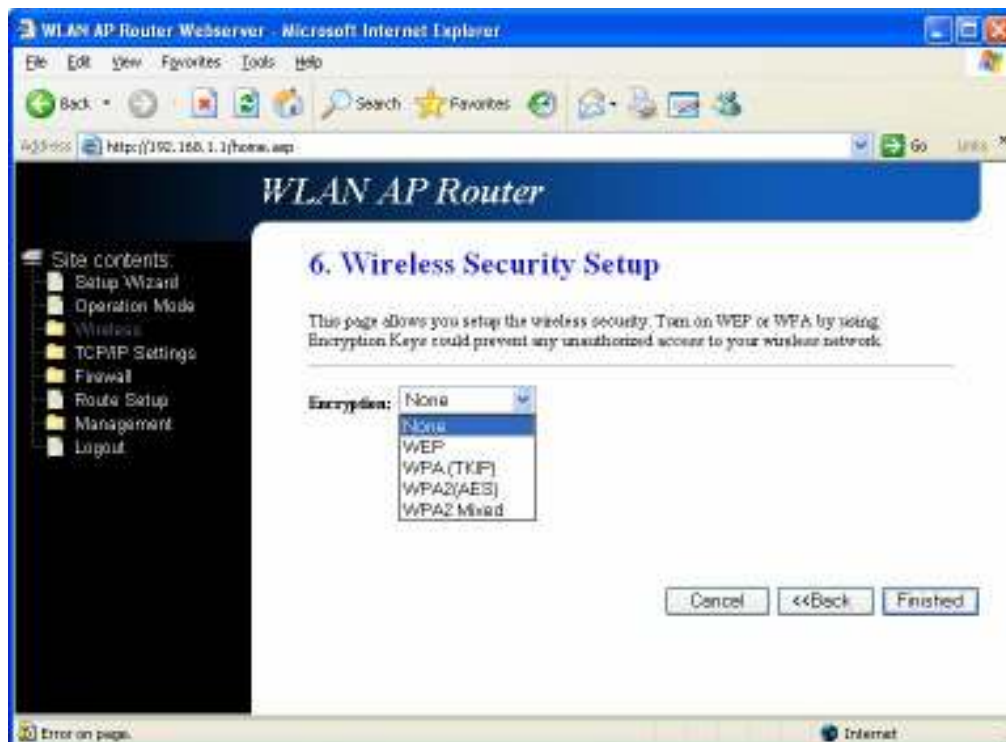

3.3 Operation Mode

You can setup different modes to LAN and WLAN interface for NAT and bridging function.

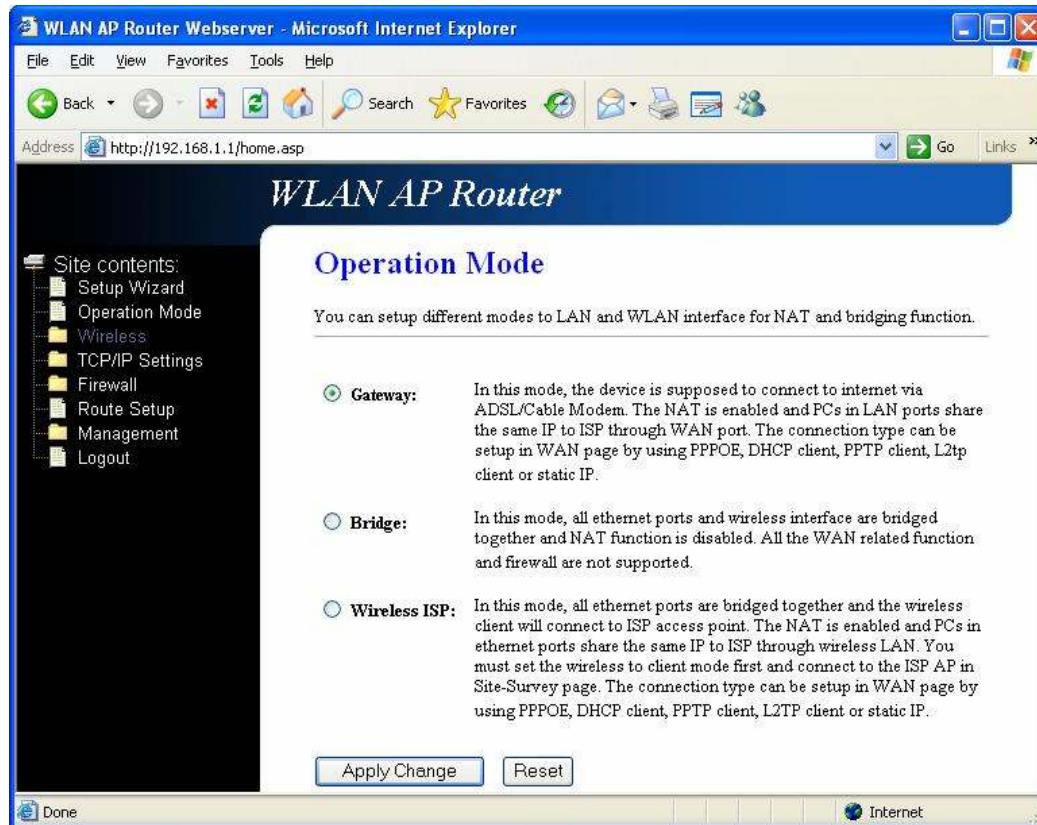

Gateway: In this mode, the device is supposed to connect to internet via ADSL/Cable Modem. The NAT is enabled and PCs in LAN ports share the same IP to ISP through WAN port. The connection type can be setup in WAN page by using PPPoE, DHCP client, PPTP client, L2TP client or static IP.

Bridged: In this mode, all Ethernet ports and wireless interface are bridged together and NAT function is disabled. All the WAN related function and firewall are not supported.

Wireless ISP: In this more, all Ethernet ports are bridged together and the wireless client will connect to ISP AP Router. The NAT is enabled and PCs in Ethernet ports share the same IP to ISP through wireless LAN. You must set the wireless to client mode first and connect to the ISP AP in Site-Survey page. The connection type can be setup in WAN page by using PPPoE, DHCP client, L2TP client or static IP.

3.4 Wireless

3.4.1 Basic Settings

This page is used to configure the parameters for wireless LAN clients who may connect to your AP Router. Here you may change wireless encryption settings as well as wireless network parameters.

WLAN AP Router

Wireless Basic Settings

This page is used to configure the parameters for wireless LAN clients which may connect to your Access Point. Here you may change wireless encryption settings as well as wireless network parameters.

☐ Disable Wireless LAN Interface

Band: 2.4 GHz (B+G)

Mode: Client

Network Type: Infrastructure

SSID: Default_11G

Channel Number: 6

Associated Clients: Show Active Clients

☐ Enable Mac Clone (Single Ethernet Client)


☐ Enable Universal Repeater Mode (Acting as AP and client simultaneously)

SSID of Extended Interface:

Apply Changes Reset

3.4.2 Advanced Settings

These settings are only for more technically advanced users who have a sufficient knowledge about the wireless LAN. These settings should not be changed unless you know what effect the changes will have on your AP Router.

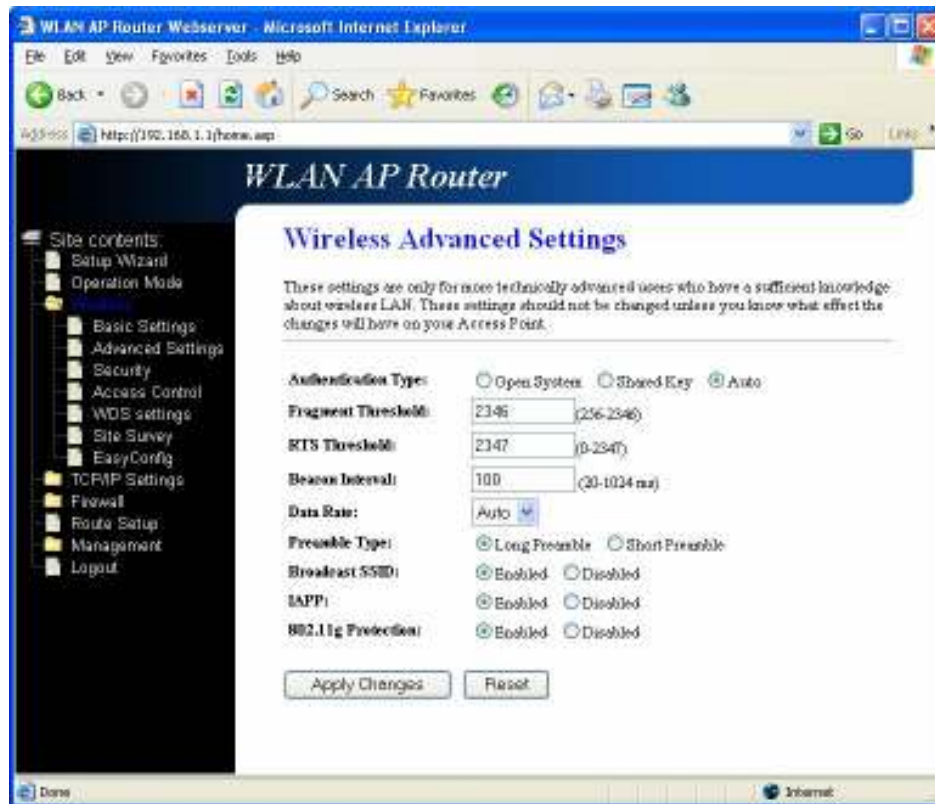

3.4.3 Security

This page allows you setup the wireless security. Turn on WEP or WPA by using Encryption Keys could prevent any unauthorized access to your wireless network.

The screenshot shows a web browser window titled "WLAN AP Router Webserver - Microsoft Internet Explorer". The address bar shows "http://192.168.1.1/home.asp". The page has a blue header with the text "WLAN AP Router". On the left, there is a "Site contents" menu with items: Setup Wizard, Operation Mode, Wireless, Basic Settings, Advanced Settings, Security, Access Control, WDS settings, Site Survey, EasyConfig, TCP/IP Settings, Firewall, Route Setup, Management, and Logout. The main content area is titled "Wireless Security Setup". Below the title, a message states: "This page allows you setup the wireless security. Turn on WEP or WPA by using Encryption Keys could prevent any unauthorized access to your wireless network." The form includes several sections: "Encryption" with a dropdown menu set to "None" and a "Set WEP Key" button; "Use 802.1x Authentication" with an unchecked checkbox; "WPA Authentication Mode" with radio buttons for "Enterprise (RADIUS)" and "Personal (Pre-Shared Key)"; "WPA Cipher Suite" with radio buttons for "TKIP" and "AES"; "WPA2 Cipher Suite" with radio buttons for "TKIP" and "AES"; "Pre-Shared Key Format" with a dropdown menu set to "Hexadecimal"; "Pre-Shared Key" with a text input field; "Enable Pre-Authentication" with an unchecked checkbox; "Authentication RADIUS Server" with fields for "Port" (1812), "IP address", and "Password"; and a "Note" stating: "Note: When encryption WEP is selected, you must set WEP key value." At the bottom, there are "Apply Changes" and "Reset" buttons.

WLAN AP Router Webserver - Microsoft Internet Explorer

File Edit View Favorites Tools Help

Back Forward Stop Search Favorites

Address http://192.168.1.1/home.asp Go Links

WLAN AP Router

Site contents:

- Setup Wizard
- Operation Mode
- Wireless
 - Basic Settings
 - Advanced Settings
 - Security
 - Access Control
 - WDS settings
 - Site Survey
 - EasyConfig
- TCP/IP Settings
- Firewall
- Route Setup
- Management
- Logout

Wireless Security Setup

This page allows you setup the wireless security. Turn on WEP or WPA by using Encryption Keys could prevent any unauthorized access to your wireless network.

Encryption: None Set WEP Key

☐ Use 802.1x Authentication WEP 64bits WEP 128bits

WPA Authentication Mode: Enterprise (RADIUS) Personal (Pre-Shared Key)

WPA Cipher Suite: TKIP AES

WPA2 Cipher Suite: TKIP AES

Pre-Shared Key Format: Hexadecimal

Pre-Shared Key:

☐ Enable Pre-Authentication

Authentication RADIUS Server: Port IP address Password


Note: When encryption WEP is selected, you must set WEP key value.

Apply Changes Reset

Done Internet

3.4.4 Access Control

If you choose “Allowed Listed”, only those clients whose wireless MAC addresses are in the access control list will be able to connect to your AP Router. When “Deny Listed” is selected, these wireless clients on the list will not be able to connect the AP Router.

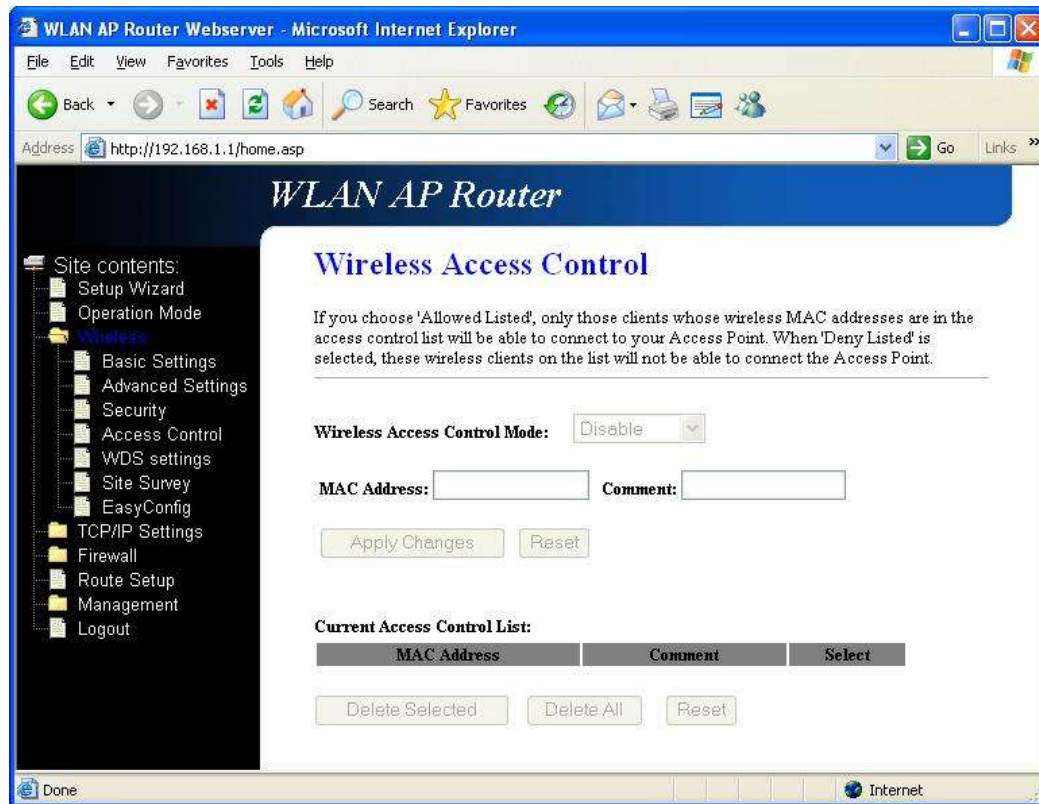

3.4.5 WDS Settings

Wireless Distribution System uses wireless media to communicate with other APs, like the Ethernet does. To do this, you must set these APs in the same channel and set MAC address of other APs which you want to communicate with in the table and enable the WDS.

The screenshot shows a web browser window titled "WLAN AP Router Webserver - Microsoft Internet Explorer". The address bar shows "http://192.168.1.1/home.asp". The page has a blue header with the text "WLAN AP Router". On the left is a navigation menu with the following items: Site contents, Setup Wizard, Operation Mode, Wireless (highlighted), Basic Settings, Advanced Settings, Security, Access Control, WDS settings, Site Survey, EasyConfig, TCP/IP Settings, Firewall, Route Setup, Management, and Logout. The main content area is titled "WDS Settings" and contains the following text: "Wireless Distribution System uses wireless media to communicate with other APs, like the Ethernet does. To do this, you must set these APs in the same channel and set MAC address of other APs which you want to communicate with in the table and then enable the WDS." Below this text is a checkbox labeled "Enable WDS". Underneath is a form for adding a WDS AP, with labels "Add WDS AP:", "MAC Address", and "Comment", followed by input fields. Below the form are four buttons: "Apply Changes", "Reset", "Set Security", and "Show Statistics". At the bottom, there is a section titled "Current WDS AP List:" followed by a table with three columns: "MAC Address", "Comment", and "Select". Below the table are three buttons: "Delete Selected", "Delete All", and "Reset". The browser's status bar at the bottom shows "Internet".

WLAN AP Router

WDS Settings

Wireless Distribution System uses wireless media to communicate with other APs, like the Ethernet does. To do this, you must set these APs in the same channel and set MAC address of other APs which you want to communicate with in the table and then enable the WDS.

☐ Enable WDS

Add WDS AP: MAC Address Comment

Apply Changes Reset Set Security Show Statistics


Current WDS AP List:

MAC Address	Comment	Select
-------------	---------	--------

Delete Selected Delete All Reset

3.4.6 Site Survey

This page provides tool to scan the wireless network. If any AP Router or IBSS is found, you could choose to connect it manually when client mode is enabled.

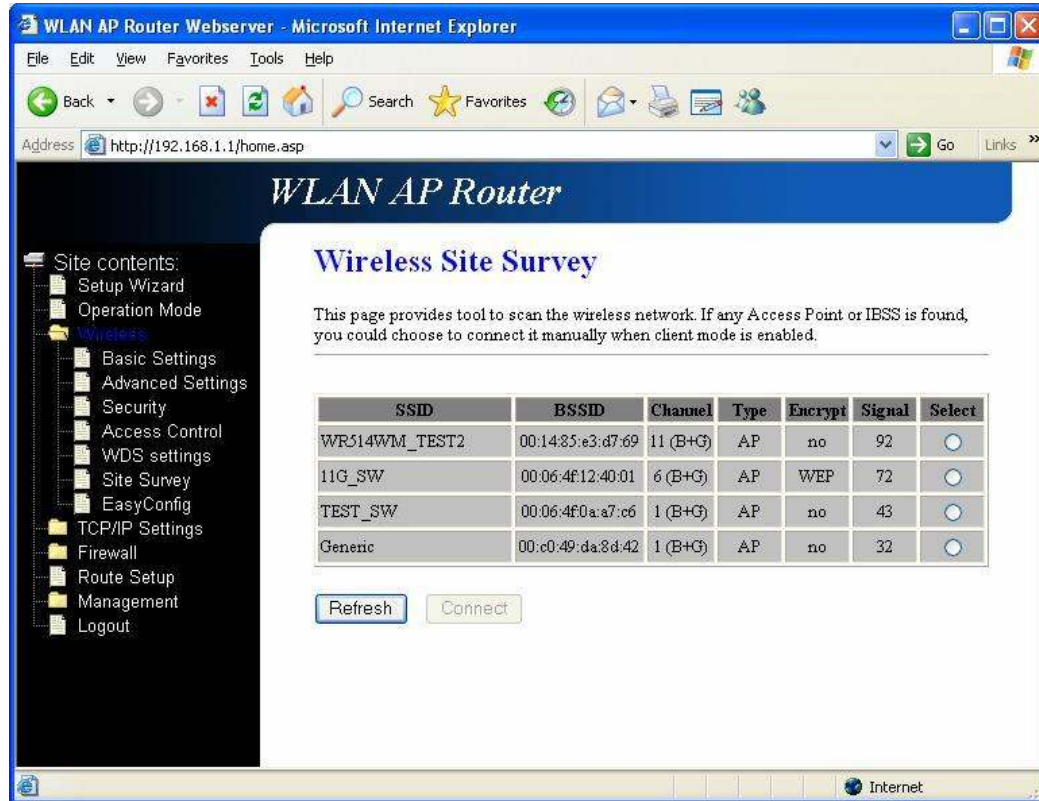

The screenshot shows a Microsoft Internet Explorer browser window displaying the 'WLAN AP Router Webserver'. The address bar shows 'http://192.168.1.1/home.asp'. The page title is 'WLAN AP Router'. On the left, a 'Site contents' menu lists various configuration options, with 'Wireless' highlighted. The main content area is titled 'Wireless Site Survey' and contains a descriptive paragraph. Below the text is a table listing detected wireless networks. At the bottom of the table are 'Refresh' and 'Connect' buttons.

Wireless Site Survey

This page provides tool to scan the wireless network. If any Access Point or IBSS is found, you could choose to connect it manually when client mode is enabled.

SSID	BSSID	Channel	Type	Encrypt	Signal	Select
WR514WM_TEST2	00:14:85:e3:d7:69	11 (B+G)	AP	no	92	☐
11G_SW	00:06:4f12:40:01	6 (B+G)	AP	WEP	72	☐
TEST_SW	00:06:4f0a:a7:c6	1 (B+G)	AP	no	43	☐
Generic	00:c0:49:da:8d:42	1 (B+G)	AP	no	32	☐

3.4.7 Easy Config

This page allows you to change the setting for EasyConfig. Use this feature could let your wireless client automatically synchronize its setting and connect to the AP Router in a minute with any hassle.



Below describes what Realtek EasyConfig is and how to use it in Realtek WLAN AP Router and PCI/mini-PCI/Card bus/USB client adapter.

By using EasyConfig, AP and client will auto-negotiate the setting for SSID and WPA/WPA2 PSK (Pre-Shared Key), and then the client will associate to AP automatically with WPA/WPA2 security enabled. After AP has been successfully configured with an EasyConfig client, AP will use and deliver the same setting to any client requesting for EasyConfig hereafter. Thus, it will make every EasyConfig client could communicate to AP by sharing the same SSID and PSK.

Currently WLAN AP could support wlan security for WPA-TKIP and WPA2-AES (The supported capability could be configurable in AP config file, the config detail will be described in the following section). When do EasyConfig, the client will propose its request algorithm (WPA-TKIP or WPA2-AES), and AP will choose which encryption algorithm will be adopted by checking the client request and its own capability. If AP is configured to support WPA-TKIP and WPA2-AES, it will accept any EasyConfig client request for WPA-TKIP or WPA2-AES, and both WPA-TKIP and WPA2-AES encryption algorithms could be used concurrently in AP.

Realtek EasyConfig has implemented two methods as:

Button Mode: User only needs push a touch-button in AP and client utility (a button in client Utility program), then it will do EasyConfig automatically between AP and client.

Q&A Mode: User needs answer some questions in client side, and selects the same questions and gives same answers for the new joined client configuration.

The following sections show you how to use it in AP and client respectively in more detail.

AP Operation

In Realtek AP web server, you could find an EasyConfig web page shown as the figure below:

The screenshot shows the 'Wireless EasyConfig' page of a 'WLAN AP Router'. The sidebar on the left lists various configuration options, with 'Wireless' currently selected. The main panel has a blue header and contains the following elements:

- Wireless EasyConfig** title.
- Instructional text: "This page allow you change the setting for EasyConfig. Use this feature could let your wireless client automatically synchronize its setting and connect to the Access Point in a minute without any hassle."
- ☒ **Enable EasyConfig**
- Configure Method:** A dropdown menu with 'Button' selected. Below it, 'Q&A' is also visible.
- ☐ **First Time Configuration**
- Apply Changes** button.
- Question 1:**
 - Pick up one question: "Your lucky number (no more than 4 digits) ?"
 - Answer: [text input field]
- Question 2:**
 - Pick up one question: "Your favorite person ?"
 - Answer: [text input field]
- Do EasyConfig (Button)** button.
- Do EasyConfig (Q&A)** button.

Figure 1

To use EasyConfig, you must enable the checkbox of **"Enable EasyConfig"** first. Then, you could select which method (button, Q&A or both button and Q&A) AP could support by clicking the **"Configure Method"** pull-down list.

If **"Button"** mode is selected, user could push EasyConfig button on the WLAN evaluation board for 4-5 seconds. Then, EasyConfig LED will begin to blink (on/off in 1 second interval) to wait for client EasyConfig Button mode request. Please note, the LED will continue blinking until any one client has been successfully accomplished EasyConfig negotiation.

Beside the push button on evaluation board, user may click **"Waiting Button Mode Request"** button in web page (as shown in above figure) to let AP enter the waiting state.

If any one client has done the EasyConfig successfully, the PSK will be generated and you may see the encryption key displayed on the EasyConfig page (as shown in Figure-1). When EasyConfig SSID and PSK are adopted, the EasyConfig LED will be steady on. Please note, when EasyConfig setting has been generated, you may not be able to change AP setting for SSID and wireless security any more, unless EasyConfig is disabled.

If “**Q&A**” mode is selected, AP is ready to accept the EasyConfig client request for Q&A mode. The client side operation will be explained in following sections. If any one client has done the EasyConfig in Q&A mode with AP, the EasyConfig web page will show “**yes**” on “**Q&A Installed**” item as shown in Figure-1 to indicate the AP has been configured by Q&A mode. It implies that any client should select the same question and give the same answer as first client used when they do the EasyConfig in Q&A mode.

User may click “**Delete Key**” button to delete all installed encryption key, SSID and Q&A value.

Windows Utility Operation (for 8185/8187 Adapter)

Launch Realtek wireless client utility on Windows platform (2K or XP), you will see there is an Easy Config tab existed, click the tab you will see a interface as shown in following figure:

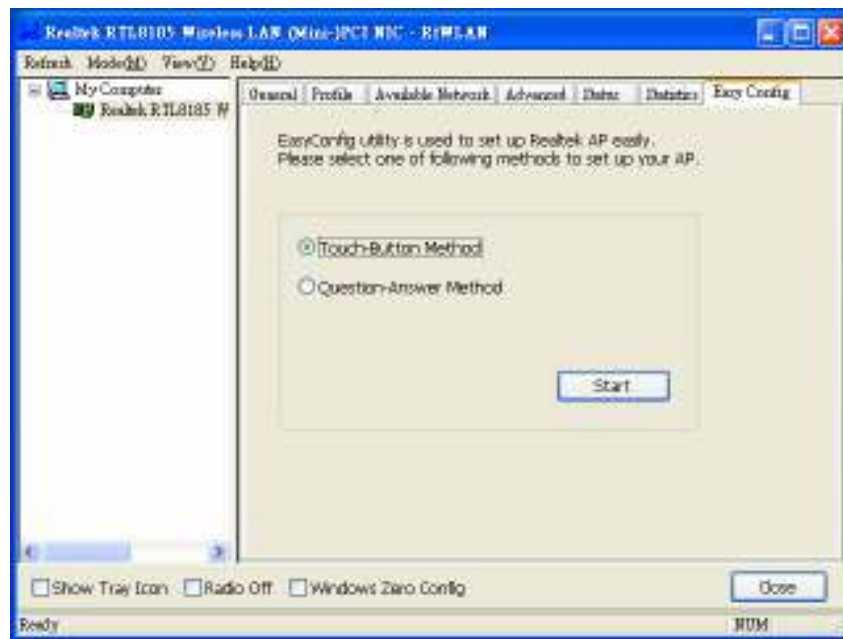


Figure 2

Here, you may select which method to use for EasyConfig. One is Touch-Button Method (**Button mode**), and the other one is Question-Answer Method (**Q&A mode**). If you select Touch-Button Method, and click “**Start**” button, then another Wizard window will be popped as shown in Figure-3 below:

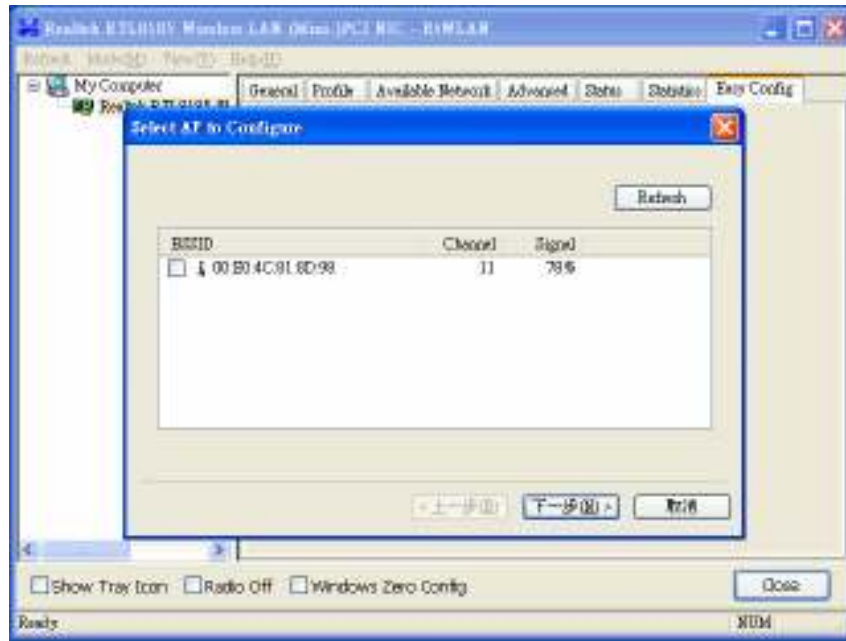


Figure 3

After “**Start**” is clicked, Utility program will try to scan Realtek EasyConfig AP, waiting for Button Mode request (i.e., The EasyConfig button has been pressed and the EasyConfig LED is blinking in AP). If any EasyConfig AP is found, it will be shown on the list table as above Figure-3. User should assert the checkbox on the list and click “**Next**” button to start the EasyConfig progress. Then, another window will be seen as in Figure-4.

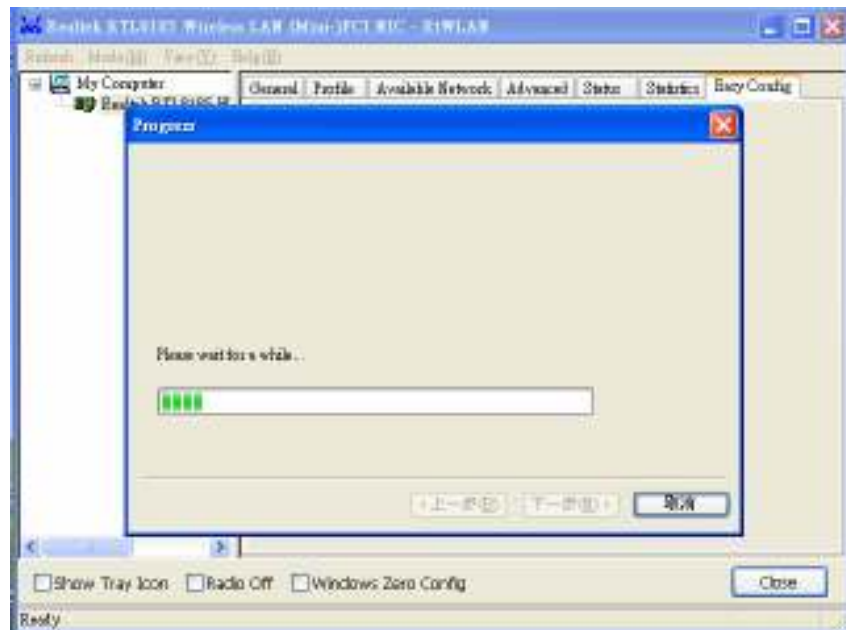


Figure 4

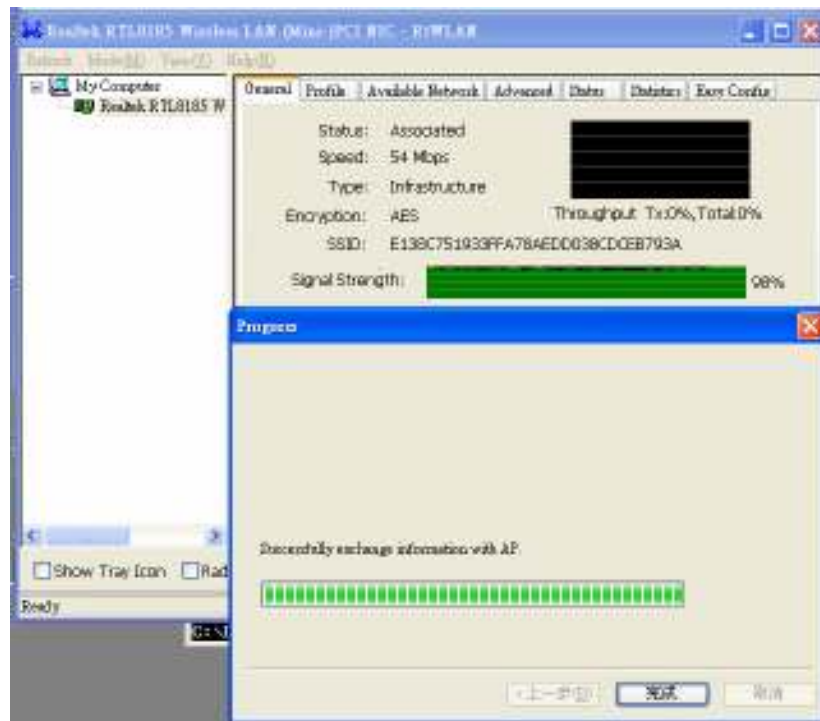


Figure 5

Now, it will try to link EasyConfig AP and exchange settings. After it is done, you may see a successful message shown in Figure-5.

If Question-Answer mode is selected and “**Start**” button is clicked in Figure-2, a Wizard will be shown as Figure-6:

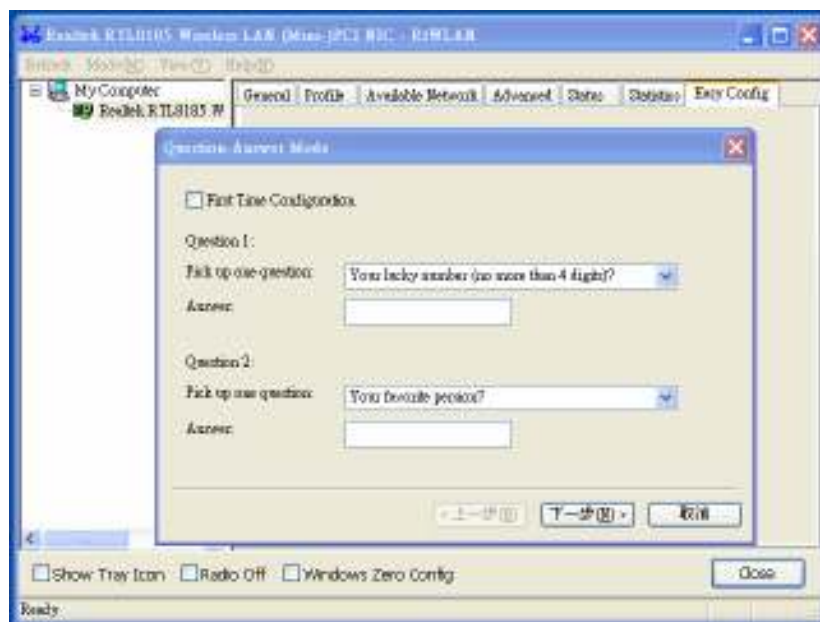


Figure 6

If the AP you want to do EasyConfig has been installed with Q&A value, you must select the same question and input the same answer as the value used in its first time configuration. If it is

first time Q&A mode configuration for the AP, you should assert the checkbox of “**First Time Configuration**”, and then select the question to answer. You could input any answer as you like, but you should remember which question and answer you set for the other client configuration.

After answer is set and “**Next**” button is clicked, utility program will start to search EasyConfig AP with Q&A mode enabled. Then, the scan result will be shown as Figure-3. Click checkbox of AP you want to associate with and click “**Next**” button, it will link to AP and exchange the setting automatically as shown in Figure-6. After it is done, you may see a successful message as shown in Figure-7.

8186 Infrastructure-Client Operation

You may set WLAN AP as an infrastructure client in Basic setting page of web server. Then, go to EasyConfig page, you may see a figure shown in below:

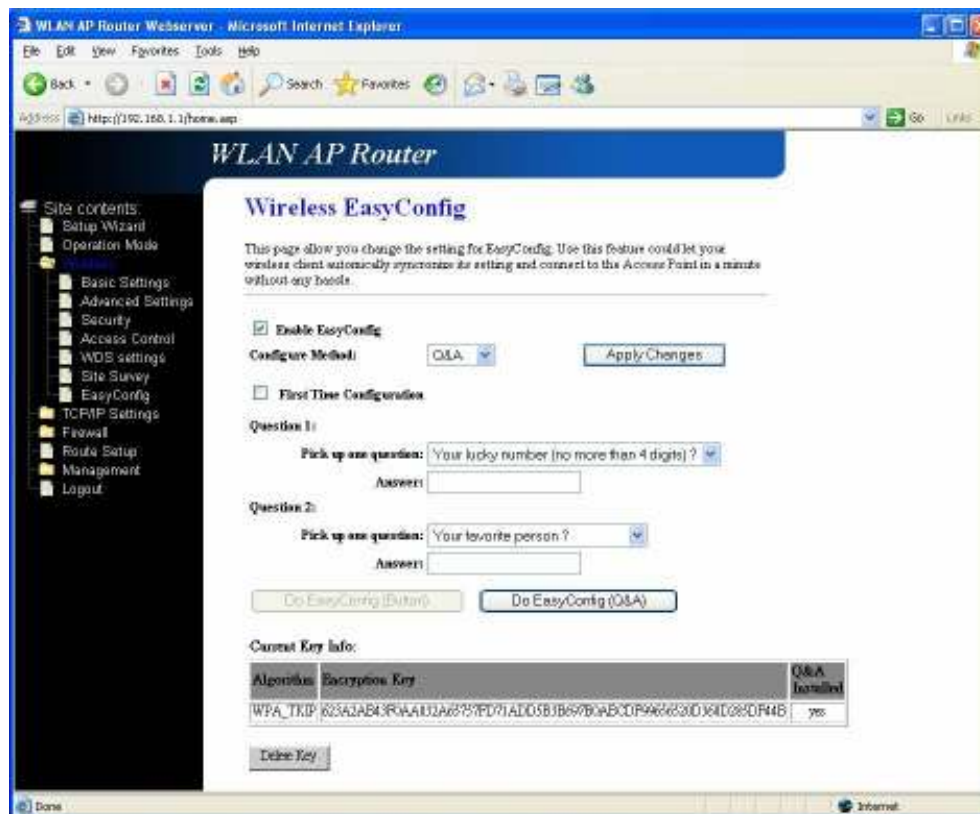


Figure 7

After EasyConfig is enabled, you may select which method to use (Button or Q&A). If Button mode is selected, user could push an EasyConfig button on 8186 evaluation board for 4-5 seconds. Then, EasyConfig LED will begin to blink. This operation is the same as in AP mode. If any EasyConfig AP is ready (AP EasyConfig LED is blinking) and found, the 8186 client will automatically negotiate the security policy with EasyConfig AP and adopt the setting when

EasyConfig is done. When the client has adopted EasyConfig the setting, the EasyConfig LED will be steady on. Except push button on evaluation board, user may enable the request by click **“Do EasyConfig (Button)”** on web page.

Beside Button mode, user may select Q&A mode for EasyConfig. If this is first time configuration of EasyConfig Q&A mode in AP (**“Q&A Installed”** item indicated as **“no”** in current key info table of AP EasyConfig web page), user must check **“First Time Configuration”** checkbox, and then input the answers for Question 1 and 2 in web page. After answers are given, click **“Do EasyConfig (Q&A)”** button, it will begin to search for EasyConfig Q&A mode AP. If any AP is found, the EasyConfig negotiation will be proceeded and the setting will be adopted automatically in AP and client when EasyConfig is done.

Please note, if it is first time configuration for Q&A mode, user must remember which question selected and which answer input because AP will save the client question and answer into Flash memory and check it when any other client requests Q&A mod EasyConfig hereafter.

8186 System Configuration

In this section, it will show you WLAN EasyConfig setting in config file. You could find this config file in 8186 CMK package, and you may edit the value as you want. Then, you could re-build the firmware image with the setting you modified, and upload it to WLAN evaluation board.

Keyword	Meaning	Value
DEF_WLANn_EASYCFG_ENABLED WLANn_EASYCFG_ENABLED	Enable/Disable EasyConfig	0 – disable, 1 – enable
DEF_WLANx_EASYCFG_MODE WLANn_EASYCFG_MODE	Indicate which configure method used	1 – button mode, 2 – QA mode, 3 – button+QA
DEF_WLANn_EASYCFG_ALG_REQ WLANn_EASYCFG_ALG_REQ	Indicate which encryption algorithm will be proposed when used in client mode	4 – WPA-TKIP, 32 –WPA2-AES
DEF_WLANn_EASYCFG_ALG_SUPP WLANn_EASYCFG_ALG_SUPP	Indicate which encryption algorithms could be accepted for client request	4 – WPA-TKIP, 32 –WPA2-AES, 36 – Both WPA-TKIP and WPA2-AES
DEF_WLANn_EASYCFG_SCAN_SSID WLANn_EASYCFG_SCAN_SSID	SSID used for EasyConfig. Please note, EasyConfig AP and client must be set with the same value	SSID text string up to 31 characters

Please note, DEF_XXX_XXX means these MIBs will be stored as default settings. Others will

be saved as current setting. "WLANn_XXXX", where 'n' could be 0 or 1 represented as 1st and 2nd wlan interface. By default, 1st wlan interface will use the 8186 internal wlan controller, and 2nd interface will base on external wlan adapter through 8186 PCI interface.

3.5 TCP/IP Settings

3.5.1 LAN Interface

This page is used to configure the parameters for local area network which connects to the LAN port of your AP Router. Here you may change the setting for IP addresses, subnet mask, DHCP...etc.

WLAN AP Router

LAN Interface Setup

This page is used to configure the parameters for local area network which connects to the LAN port of your Access Point. Here you may change the setting for IP address, subnet mask, DHCP, etc..

IP Address: 192.168.1.1

Subnet Mask: 255.255.255.0

Default Gateway: 0.0.0.0

DHCP: Server

DHCP Client Range: 192.168.1.2 - 192.168.1.254 [Show Client](#)

802.1d Spanning Tree: Disabled

Clone MAC Address: 000000000000

[Apply Changes](#) [Reset](#)

3.5.2 WAN Interface


This page is used to configure the parameters for Internet network which connects to the WAN port of your AP Router. Here you may change the Access Method to static IP, PPPoE, PPTP or L2TP by click the item value of WAN Access Type.

The screenshot shows a web browser window titled "WLAN AP Router Webserver - Microsoft Internet Explorer". The address bar shows "https://192.168.1.1/home.asp". The page has a blue header with the text "WLAN AP Router". On the left, there is a "Site contents" menu with items: Setup Wizard, Operation Mode, Wireless, WAN Settings (selected), LAN Interface, WAN Interface, Firewall, Route Setup, Management, and Logout. The main content area is titled "WAN Interface Setup". Below the title, there is a paragraph: "This page is used to configure the parameters for Internet network which connects to the WAN port of your Access Point. Here you may change the access method to static IP, DHCP, PPPoE, PPTP or L2TP by click the item value of WAN Access type." The form contains the following fields and options: "WAN Access Type:" with a dropdown menu set to "L2TP"; "IP Address:" with a text box containing "61.1.1.2"; "Subnet Mask:" with a text box containing "255.255.255.0"; "Server IP Address:" with a text box containing "61.1.1.1"; "User Name:" with a text box containing "l2tp"; "Password:" with a text box containing "****"; "MTU Size:" with a text box containing "1412" and a note "(1400-1492 bytes)"; "Obtain DNS Automatically" (selected radio button) and "Set DNS Manually" (unselected radio button); "DNS 1:", "DNS 2:", and "DNS 3:" each with an empty text box; "Clone MAC Address:" with a text box containing "000000000000"; and five checkboxes: "Enable uPnP", "Enable Web Server Access on WAN", "Enable IPsec pass through on VPN connection", "Enable PPTP pass through on VPN connection", and "Enable L2TP pass through on VPN connection". At the bottom of the form are two buttons: "Apply Changes" and "Reset".

3.6 Firewall


3.6.1 Port Filtering

Entries in this table are used to restrict certain types of data packets from your local network to Internet through the Gateway. Use of such filter can be helpful securing or restricting your local network.

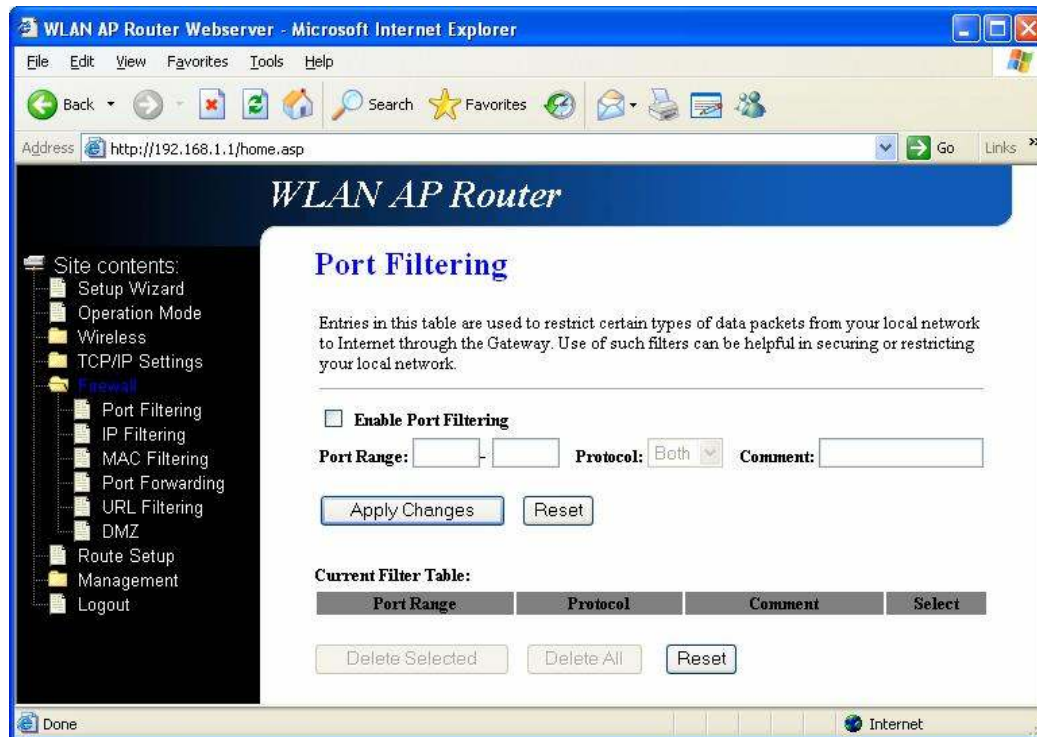


3.6.2 IP Filtering

Entries in this table are used to restrict certain types of data packets from your local network to Internet through the Gateway. Use of such filters can be helpful in securing or restricting your local network.

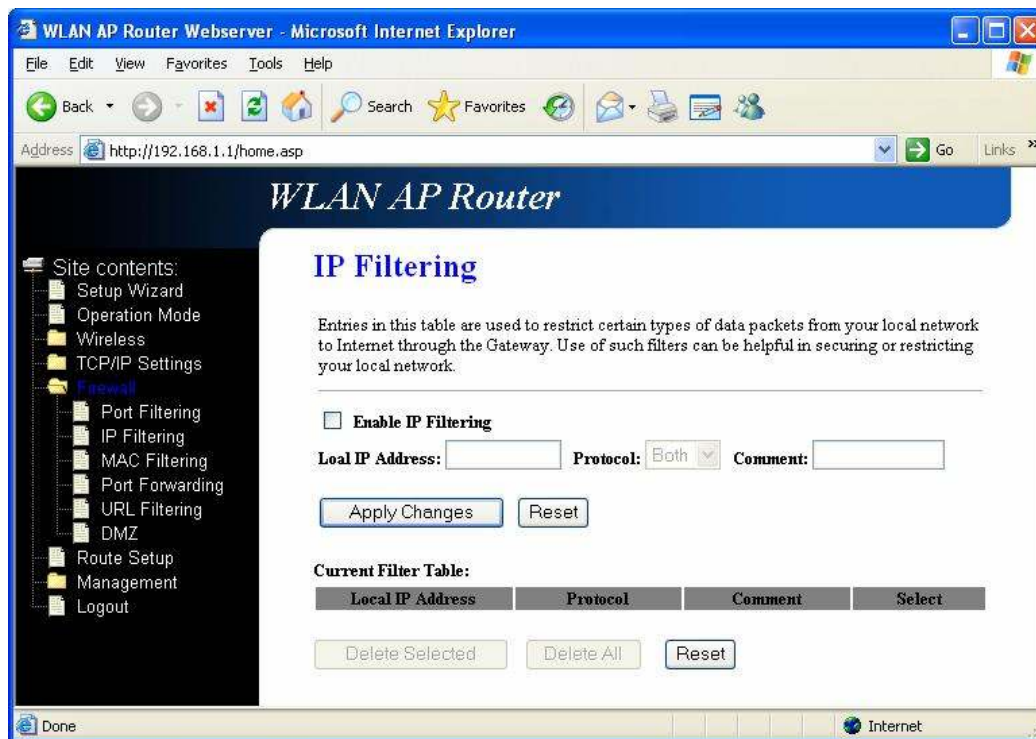

3.6.3 MAC Filtering

Entries in this table are used to restrict certain types of data packets from your local network to Internet through the Gateway. Use of such filters can be helpful in securing or restricting your local network.

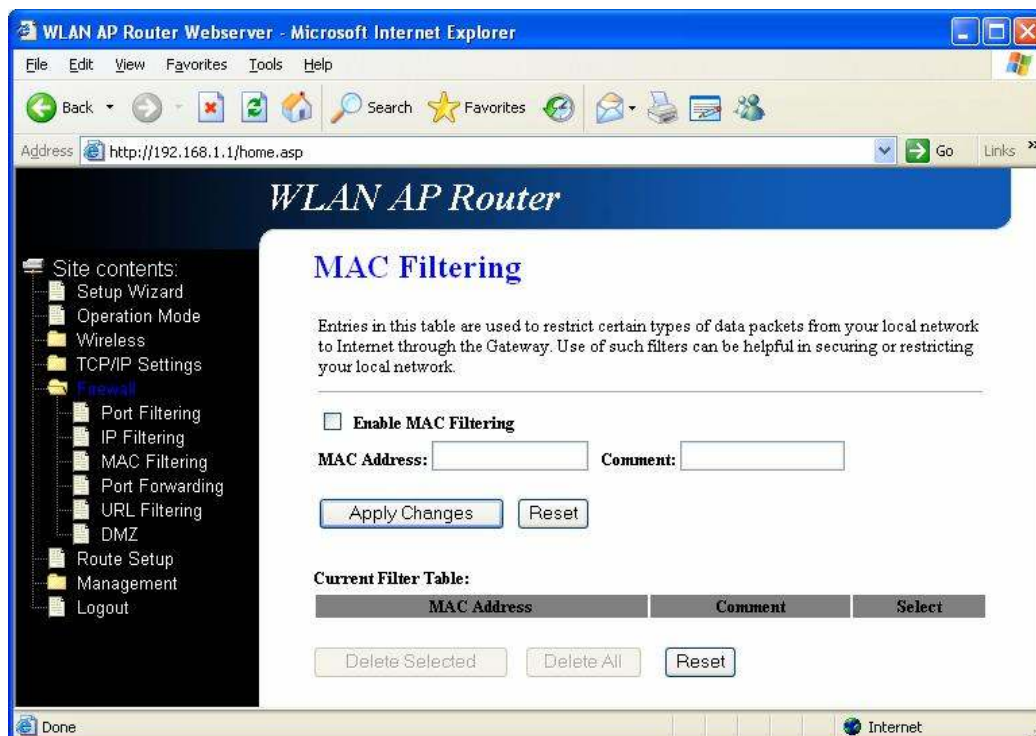


3.6.4 Port Forwarding

Entries in this table allow you to automatically redirect common network services to a specific machine behind the NAT firewall. These settings are only necessary if you wish to host some sort of server like a web server or mail server on the private local network behind your Gateway's NAT firewall.




3.6.5 URL Filtering

URL filter is used to deny LAN users from accessing the internet. Block those URLs which contain keywords listed below.

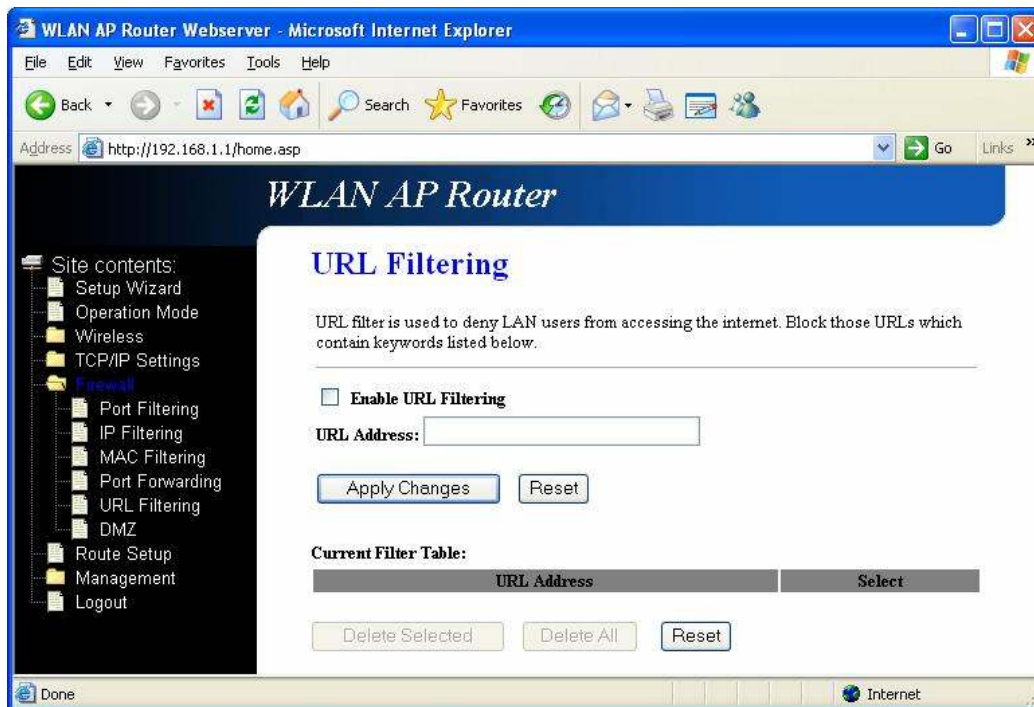

3.6.6 DMZ

A Demilitarized Zone is used to provide Internet service without sacrificing unauthorized access to its local private network. Typically, the DMZ host contains devices accessible to Internet traffic, such as Web (HTTP) servers, FTP servers, SMTP(e-mail) servers and DNS servers.

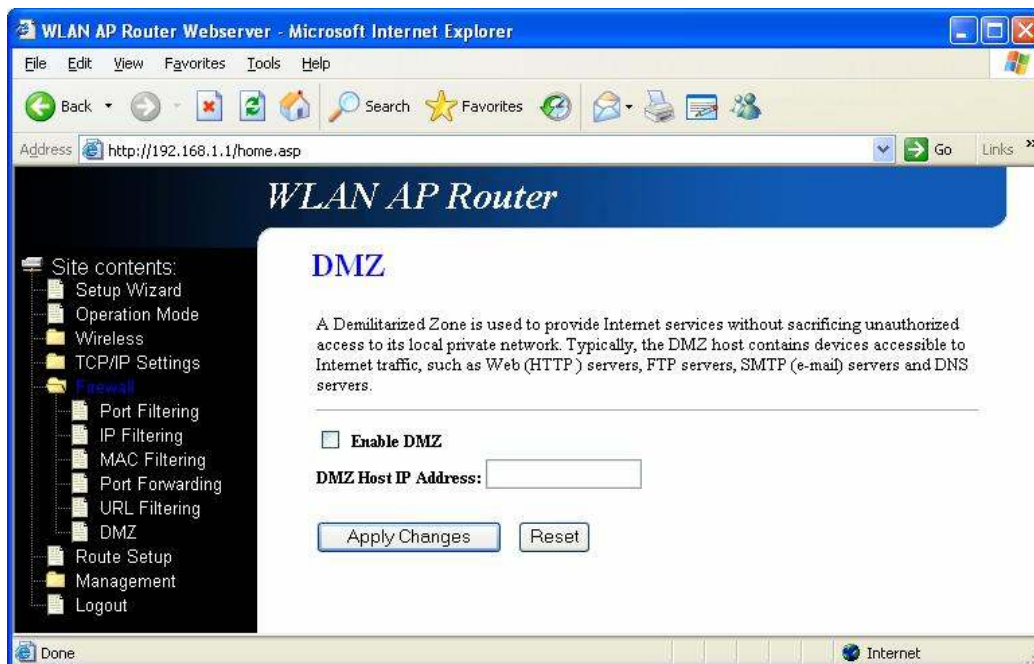

3.7 Route Setup

This page is used to setup dynamic routing protocol or edit static route entry.

The screenshot shows a web browser window titled "WLAN AP Router Webserver - Microsoft Internet Explorer". The address bar shows "http://192.168.1.1/home.asp". The page has a blue header with the text "WLAN AP Router". On the left, there is a "Site contents:" menu with links: Setup Wizard, Operation Mode, Wireless, TCP/IP Settings, Firewall, Route Setup, Management, and Logout. The main content area is titled "Routing Setup" and contains the following elements:

This page is used to setup dynamic routing protocol or edit static route entry.

☒ **Enable Dynamic Route**

RIP transmit to WAN: RIP1 and RIP2 (dropdown)

RIP receive from WAN: RIP1 and RIP2 (dropdown)

RIP transmit to LAN: RIP1 and RIP2 (dropdown)

RIP receive from LAN: RIP1 and RIP2 (dropdown)

Apply Changes

☐ **Enable Static Route**

IP Address: [text box] Subnet Mask: [text box]

Default Gateway: [text box]

Apply Changes Reset Show Route Table

Static Route Table:

Destination IP Address	Netmask	Gateway	Select
Delete Selected Delete All Reset			

3.8 Management

3.8.1 Status

This page shows the current status and some basic settings of the device, such as System information, Wireless Configuration, TCP/IP Configuration, and WAN Configuration.

WLAN AP Router

Access Point Status

This page shows the current status and some basic settings of the device.

System	
Uptime	0day:0h:31m:28s
Firmware Version	v1.3.9

Wireless Configuration	
Mode	Infrastructure Client
Band	2.4 GHz (B+G)
SSID	Default_11G
Channel Number	9
Encryption	Disabled
BSSID	00:00:00:00:00:00
State	Scanning


TCP/IP Configuration	
Attain IP Protocol	Fixed IP
IP Address	192.168.1.1
Subnet Mask	255.255.255.0
Default Gateway	192.168.1.1
DHCP Server	Enabled
MAC Address	00:06:4f:bb:cc:dd

WAN Configuration	
Attain IP Protocol	L2TP Disconnected
IP Address	0.0.0.0
Subnet Mask	0.0.0.0
Default Gateway	0.0.0.0
MAC Address	00:06:4f:cc:cc:cd

goahead
WEB SERVER

3.8.2 Statistics

This page shows the packet counters for transmission and reception regarding to wireless and Ethernet networks.

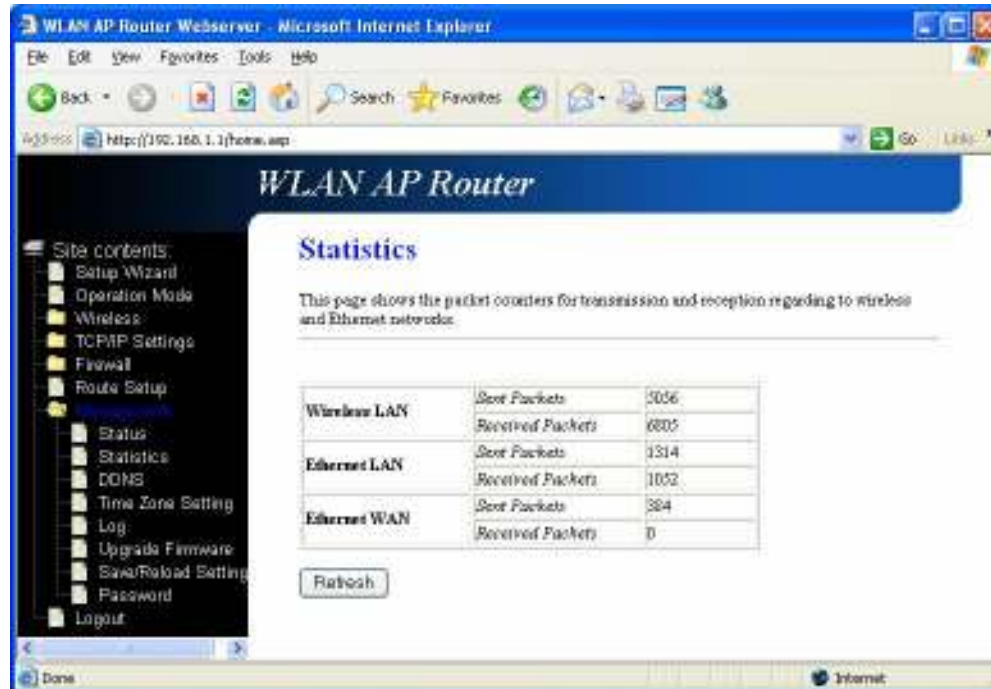

3.8.3 DDNS

Dynamic DNS is a service that provides you with a valid, unchanging, internet domain name (an URL) to go with that (possibly ever-changing) IP address.

The screenshot displays the 'WLAN AP Router' web interface in Microsoft Internet Explorer, specifically the 'Dynamic DNS Setting' page. The left sidebar is identical to the previous screenshot. The main content area is titled 'Dynamic DNS Setting' and includes a description: 'Dynamic DNS is a service, that provides you with a valid, unchanging, internet domain name (an URL) to go with that (possibly ever-changing) IP address.' Below this is a form with the following fields:

- ☐ Enable DDNS
- Service Provider:
- Domain Name:
- User Name/Email:
- Password/Key:

A note at the bottom states: 'Note: For T20, you can have a 30 days free trial [here](#), or manage your T20 account in [control panel](#). For DynDNS, you can create your DynDNS account [here](#).' At the bottom of the form are 'Apply Change' and 'Reset' buttons.

3.8.4 Time Zone Setting

You can maintain the system time by synchronizing with a public time server over the Internet.

The screenshot shows the 'WLAN AP Router' web interface in Microsoft Internet Explorer. The browser address bar shows 'http://192.168.1.1/home.asp'. The left sidebar contains a 'Site contents' menu with options like Setup Wizard, Operation Mode, Wireless, TCP/IP Settings, Firewall, Route Setup, Status, Statistics, DNS, Time Zone Setting (selected), Log, Upgrade Firmware, Save/Reload Setting, Password, and Logout. The main content area is titled 'Time Zone Setting' and includes the text: 'You can maintain the system time by synchronizing with a public time server over the Internet.' Below this, there are input fields for 'Current Time' (Yr: 2000, Mon: 1, Day: 1, Hr: 0, Min: 32, Sec: 59) and 'Time Zone Select' (set to GMT+08:00/Taipei). There is an unchecked checkbox for 'Enable NTP client update'. Below that, the 'NTP server' is set to '192.5.81.41 - North America', with an option for '(Manual IP Setting)'. At the bottom are buttons for 'Apply Change', 'Reset', and 'Refresh'.


3.8.5 Log

This page can be used to set remote log server and show the system log.

The screenshot shows the 'WLAN AP Router' web interface in Microsoft Internet Explorer. The browser address bar shows 'http://192.168.1.1/home.asp'. The left sidebar is the same as in the previous screenshot, with 'Log' selected under 'Site contents'. The main content area is titled 'System Log' and includes the text: 'This page can be used to set remote log server and show the system log.' Below this, there are checkboxes for 'Enable Log' (checked) and 'Enable Remote Log' (unchecked). Under 'Enable Log', there are sub-options for 'system all' (checked) and 'wireless' (unchecked). A text field for 'Log Server IP Address' is present. An 'Apply Changes' button is located below these options. A large text area displays the system log, showing various events such as 'device wlan0 left promiscuous mode', 'port 1(eth0) entering disabled state', 'device eth0 left promiscuous mode', 'miscuous mode', 'eth0:phy is 8305', 'device wlan0 entered promiscuous mode', 'port 2(wlan0) entering listening state', 'port 1(eth0) entering listening state', 'port 2(wlan0) entering learning state', 'port 2(wlan0) entering forwarding state', 'topology change detected, propagating', 'port 1(eth0) entering learning state', 'port 1(eth0) entering forwarding state', and 'topology change detected, propagating'. At the bottom of the log area are 'Refresh' and 'Clear' buttons.


3.8.6 Upgrade Firmware

This page allows you upgrade the AP Router firmware to new version. **Please note DO NOT** power off the device during the upload because it may crash the system.

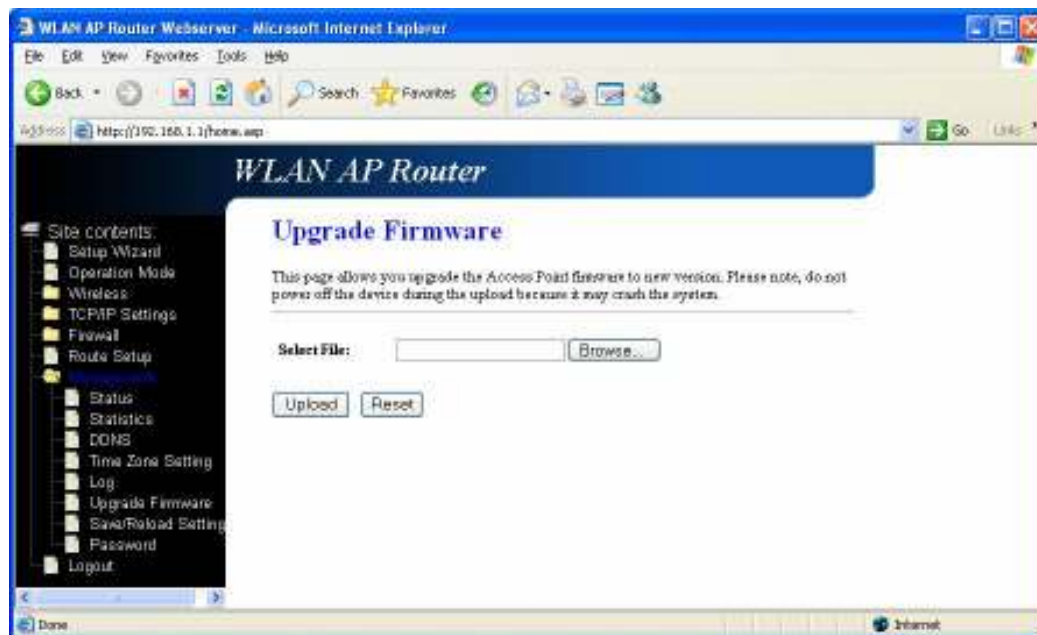

3.8.7 Save/Reload Setting

This page allows you save current settings to a file or reload the settings from the file which was saved previously. Besides, you could reset the current configuration to factory default.

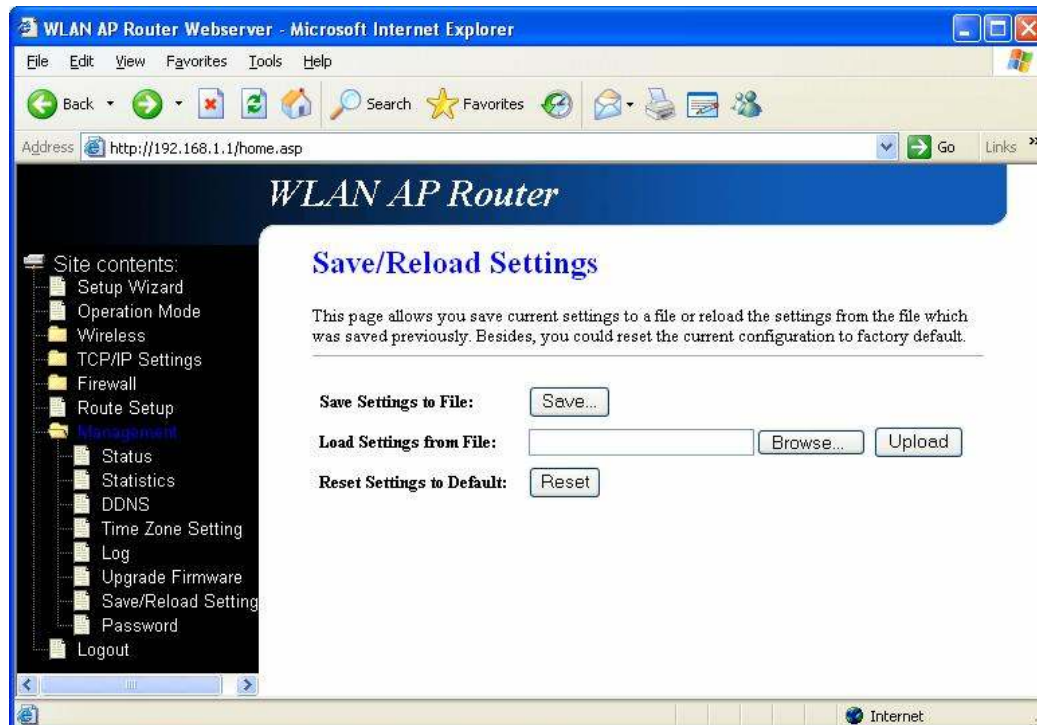

3.8.8 Password

This page is used to set the account to access the web server of AP Router. Empty user name and password will disable the protection.


The screenshot shows the 'WLAN AP Router Webserver' interface in Microsoft Internet Explorer. The address bar displays 'http://192.168.1.1/home.asp'. The page title is 'WLAN AP Router'. On the left, a 'Site contents' menu lists various configuration options, with 'Management' highlighted. The main content area is titled 'Password Setup' and contains the following text: 'This page is used to set the account to access the web server of Access Point. Empty user name and password will disable the protection.' Below this text are three input fields: 'User Name:', 'New Password:', and 'Confirmed Password:'. At the bottom of the form are two buttons: 'Apply Changes' and 'Reset'.

3.9 Logout

This page is used to logout WLAN AP Webserver.

The screenshot shows the 'WLAN AP Router Webserver' interface in Microsoft Internet Explorer. The address bar displays 'http://192.168.1.1/home.asp'. The page title is 'WLAN AP Router'. On the left, a 'Site contents' menu lists various configuration options, with 'Management' highlighted. The main content area is titled 'Logout' and contains the following text: 'This page is used to logout.' Below this text is a question: 'Do you want to logout ?'. At the bottom of the form is a single button: 'Apply Change'.

Click “**Apply Change**” button to logout the webserver. And then, you will see the below screen:

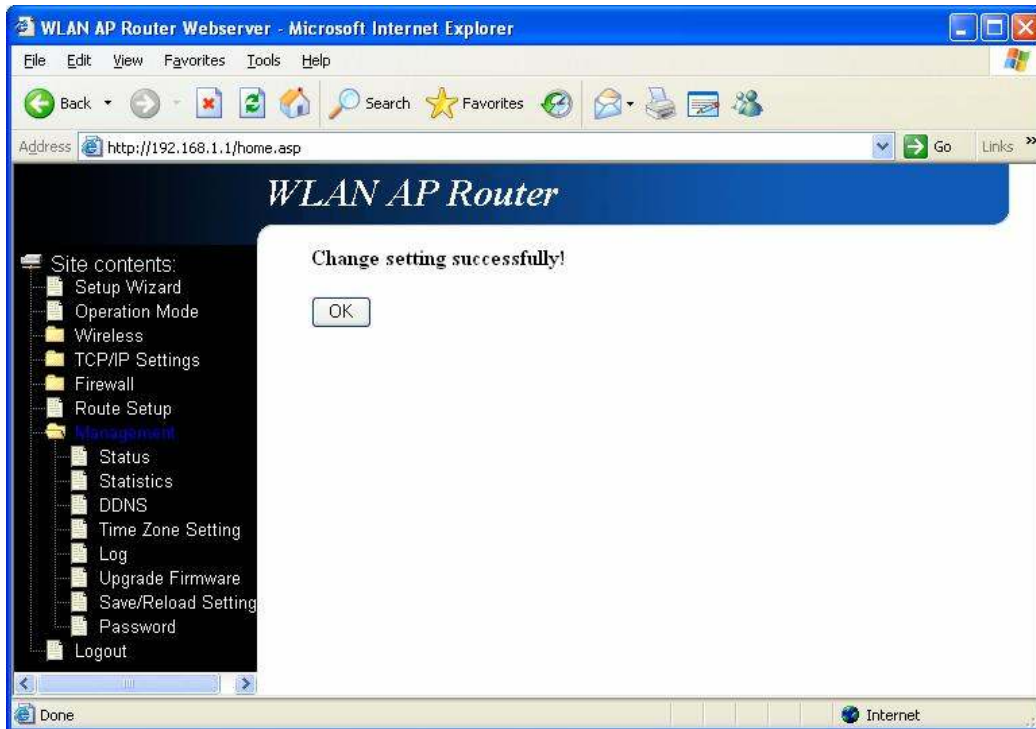

4 Troubleshooting

This chapter covers some common problems that user may encounter while accessing the wireless router and some possible solutions for them. If you follow the suggested instructions to configure the wireless router, but router still does not function properly, please contact your local dealer for assistance.

Q1) Can not connect to the wireless router.

Ans: Check the following.

- a) If the wireless router is properly installed, if LAN connections are OK, and if wireless Router is powered on.
- b) Ensure that your PC and wireless router are on the same network segment.
- c) If your PC is set to "Obtain an IP Address automatically" (DHCP client), restart it.
- d) If your PC uses a Fixed (Static) IP address, ensure that it is using an IP Address within the range **192.168.1.2** to **192.168.1.254** and thus compatible with the wireless router's default IP Address of **192.168.1.1**. Also, the Network Mask should be set to **255.255.255.0** to match the wireless router. In Windows, you can check these settings by using "**Control Panel → Network**" to check the "**Properties**" for the TCP/IP protocol.

Q2) When I enter a URL or IP address I get a timed out error.

Ans: A number of things could be causing this. Try the following troubleshooting steps.

- a) Check if other PCs work. If they do, ensure that your PCs IP settings are correct. If using a fixed (static) IP address, check the Network Mask, Default gateway, and DNS as well as the IP Address.
- b) If the PCs are configured correctly, but still not working, check the wireless router. Ensure that it is connected and on. Connect to it and check its settings. If you can't connect to it, check the LAN and power connections.
- c) If the wireless router is configured correctly, check your Internet connection (DSL/cable modem etc) to see that it is working correctly.

Q3) Some applications do not run properly when using the wireless router.

Ans: The wireless router processes the data passing through it, so it is not transparent.

Use the Special Applications feature to allow the use of Internet applications that do not function correctly. For example, you can use DMZ function, this should work with almost every application but there is a security risk since firewall is disabled and only one PC can be used in this feature.

Q4) My PC can not locate the wireless router.

Ans: Check the following.

- a) If your PC is set to Infrastructure Mode, because the router is always in Infrastructure Mode.
- b) If the SSID on your PC and wireless router are the same. Remember that the SSID is case-sensitive.
- c) If both of your PC and wireless router have the same WEP settings. The default setting for the wireless router is disabled, so your wireless station should also have WEP disabled.
- d) If WEP is enabled on the wireless router, your PC must have WEP enabled, and the key tables (64/128 bit encryption) must match.
- e) If the wireless router's wireless screen is set to allow LAN access to select wireless stations only, then each of your wireless stations must have been selected or access will be blocked.
- f) To see if radio interference is causing a problem, check if connection is possible when close to the wireless router. Remember that the transmission range can be as short as 100 feet in poor environment.

Q5) Wireless connection speed is very slow.

Ans: A wireless system transmission speed depends on the distance and the environment.

To obtain the highest possible connection speed, you can try the followings:

- a) Try to adjust wireless router location and orientation.
- b) If there are interference problems, change to another wireless channel.
- c) If other devices cause the interference, you should turn off that device or relocate it.

Q6) The "Status" light is ON (steady Green) after power on, it means the router is hung

Ans : Please disconnect the power adapter from the power jack on the router and reconnect the power adapter again to the router, check if the "Status" light is flashing normally.